


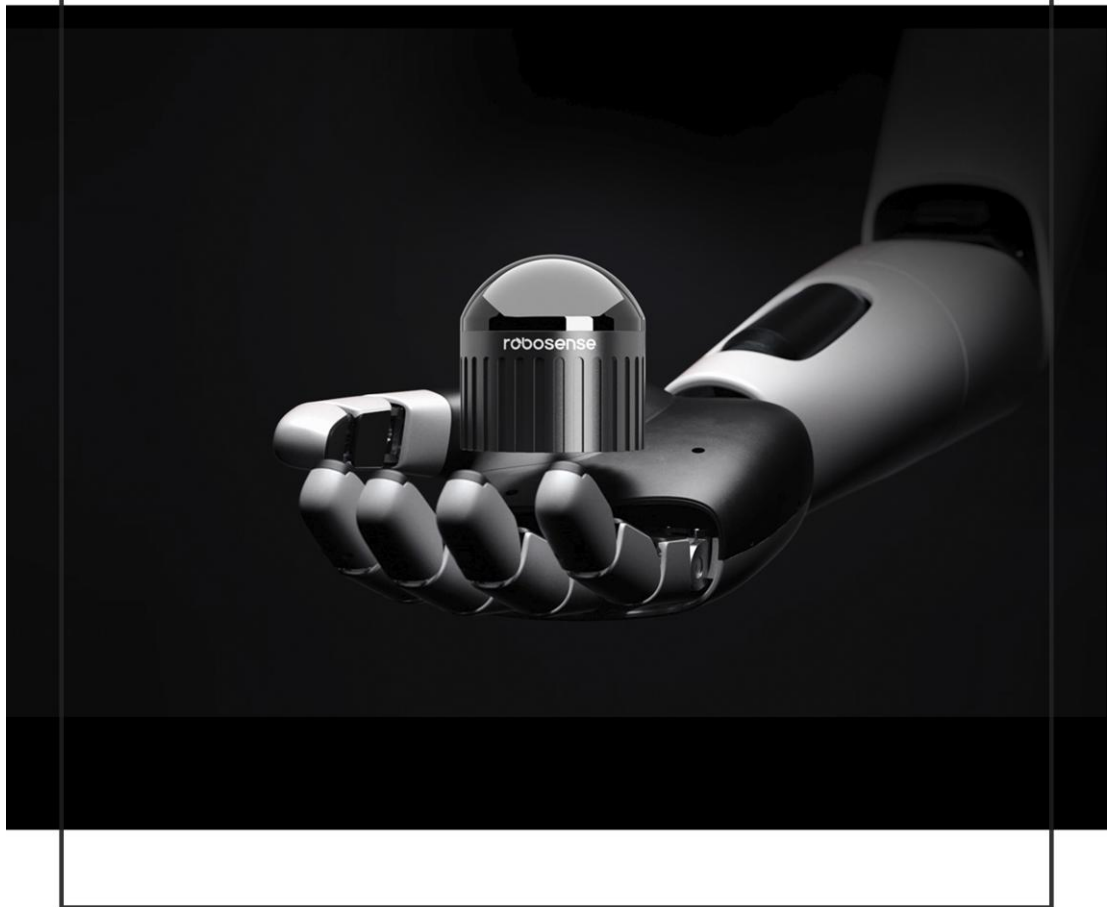

# Airy

User Guide






Version 1.0

## Change Description

<b>Version</b>	<b>Revision Date</b>	<b>Description</b>
1.0	2025/01/02	Initial release
1.1	2025/03/18	<ol style="list-style-type: none"><li>1. Add the description of IMU data packet structure</li><li>2. Fix some description errors</li></ol>
1.2	2025/07/11	<ol style="list-style-type: none"><li>1. Add explanation of different version of airy</li><li>2. Add the transmission delay for different channels</li><li>3. Fix some description errors</li></ol>

## Reading Prompt

### Symbolic Instructions

-  Warning: The usage process should be strictly followed, otherwise it may lead to potential dangerous situations such as minor injuries or property damage.
-  Important: The usage process should be observed, otherwise it may cause potential harmful situations such as product damage.
-  Tip: The usage process should be valued sufficiently to achieve maximum value of the product efficiently and smoothly.

### Resource Download

Please click the following link to download the latest product manual, RSview and other resources:

<https://www.robosense.ai/en/resources>

### More Information

Manufacturer: Suteng Innovation Technology Co., Ltd. (RoboSense).

Website: <https://www.robosense.ai/en>

Technical Support: support@robosense.cn

Address: Building 9, Block 2, Zhongguan Honghualing Industry Southern District,  
1213 Liuxian Avenue, Taoyuan Street, Nanshan District, Shenzhen, China

Phone: +86-0755-86325830

Email: service@robosense.cn

Working Hours: Monday to Friday, 9:00 AM to 6:00 PM (GMT/UTC +8)

# Content

Change Description.....	1
Reading Prompt .....	2
Content.....	3
1 Safety Notices .....	6
1.1 Legal Statement .....	6
1.2 User Guidelines.....	6
1.3 Illegal Operation .....	6
1.4 Requirements for Operating Personnel.....	7
1.5 Work Safety and Special Hazards .....	7
2 Product Description .....	9
2.1 Product Overview .....	9
2.2 Product Structure .....	9
2.3 FOV Distribution .....	10
2.4 Specifications .....	12
2.5 Product Principle.....	13
2.5.1 Coordinate Mapping .....	13
2.5.2 Reflectivity Interpretation.....	13
2.5.3 Return Modes.....	13
2.5.4 Phase Locking.....	14
2.5.5 Time Synchronization Method.....	15
3 Product Installation .....	19
3.1 Accessory Description .....	19
3.2 Mechanical Installation.....	19
3.3 Interface Description.....	21
3.3.1 Aviation Plug Interface and Definitions.....	21
3.3.2 Interface Cable (Optional) .....	22
3.3.3 Power Interface .....	23
3.3.4 RJ45 Ethernet Port .....	24
3.3.5 Sync Interface .....	24
3.4 Quick Connection .....	24
4 Product Usage .....	27
4.1 Product Coordinate System.....	27
4.2 Web UI Usage .....	27
4.2.1 Web UI Functions .....	27




4.2.2	Accessing the Web UI Interface .....	27
4.2.3	Using the Web UI Interface .....	28
4.3	RSView Usage .....	28
4.3.1	Software Functions .....	28
4.3.2	Installing RSView .....	29
4.3.3	Using RSView.....	29
4.4	Communication Protocols.....	29
4.4.1	MSOP and DIFOP Data Protocol .....	29
4.4.2	Main Data Stream Output Protocol (MSOP).....	30
4.4.3	Device Info Output Protocol (DIFOP).....	33
4.4.4	IMU Data Stream Output Protocol .....	36
5	Product Maintenance .....	39
5.1	Transportation and Logistics.....	39
5.2	Storage .....	39
5.3	Product Cleaning.....	39
5.3.1	Precautions.....	40
5.3.2	Required Materials.....	40
5.3.3	Cleaning Method.....	40
6	Fault Diagnosis .....	41
7	After-sales Service .....	43
Appendix A	Web UI operation .....	44
A.1	Product information .....	44
A.2	Product parameter setting.....	44
A.2.1	General Setting.....	44
A.2.2	Performance Setting.....	47
A.2.3	Angle Pulse Setting.....	48
A.3	Product diagnostics/operational status .....	49
A.4	Product firmware upgrade.....	50
Appendix B	ROS&ROS2 Package .....	52
Appendix C	DIFOP Data Definitions.....	53
C.1	Motor Speed (MOT_SPD) .....	53
C.2	Ethernet (ETH) .....	53
C.3	Mainboard Firmware Version (TOP_FRM).....	54
C.4	Baseboard Firmware Version (BOT_FRM).....	54
C.5	APP Firmware Version (SOF_FRM).....	54
C.6	Motor Firmware Version (MOT_FRM).....	55
C.7	Product Serial Number (SN) .....	55

---


C.8 Time Sync Mode Setting (TIME_SYNC_INFO) .....	55
C.9 Time (UTC_TIME) .....	56
C.10 Real-Time motor speed (REALTIME_ROTATION_SPEED) .....	56
C.11 Vertical Angle calibration (COR_VERT_ANG) .....	56
C.12 Horizontal Angle Calibration (COR_HOR_ANG) .....	57
C.13 Mainboard Input Temperature (MAINBOARD_VOLTAGE) .....	58
C.14 Device Input Voltage (MACHINE_VOLTAGE).....	59
C.15 Baseboard 12V Voltage (BOTTOMBOARD_VOLTAGE (12V) .....	59
C.16 Mainboard Emission Temperature (MAINBOARD_EMIT_TEMP).....	59
C.17 IMU Calibration Data (IMU_CALIB_DATA) .....	59
Appendix D Channel distance measuring ability and emission offset corresponding table.....	61
Appendix E Structural Drawings .....	65
.....	65

# 1 Safety Notices


## 1.1 Legal Statement

-  Unless otherwise stated, all rights (including copyrights, trademarks, patents, trade secrets, and other related rights) in RoboSense's products, technologies, software, programs, data, and other information (including text, icons, photographs, audio, video, graphics, color combinations, layout design, etc.) are owned by RoboSense and its licensors.
-  No one may use any content contained in this manual in any unauthorized manner without the prior written consent of RoboSense.
-  The word "RoboSense" and other logos and product and service names are owned by RoboSense. If you need to use them for any advertising or displaying purposes, you must obtain prior written authorization from RoboSense.

## 1.2 User Guidelines

-  Please use this product in accordance with the following requirements:
  - 1) Please strictly abide by relevant national laser safety laws and regulations.
  - 2) Please read this product manual in detail before using the product.
  - 3) Please use this product only in the relevant field of application.
  - 4) Please avoid using this product in environments that are explosive, highly corrosive, or beyond the IP protection level of the equipment.

## 1.3 Illegal Operation

-  Please use this product in accordance with the regulations, otherwise it may cause product damage, property loss, and personal injury. Users are responsible for risk arising from unauthorized operations.
  - 1) Do not disassemble or modify this product (including accompanying accessories).

- 2) Non-specified power supply and accompanying accessories are prohibited;
- 3) Please avoid abnormal operations such as dropping, colliding, burning, etc.;
- 4) If you notice any damage to the appearance of the device (arc protection cover), please immediately stop using it.
- 5) If you notice any abnormal operation of the product, please immediately stop using it and contact RoboSense in a timely manner.

## 1.4 Requirements for Operating Personnel


**!** The use of this product requires certain basic professional knowledge and other related requirements for operating personnel. Unreasonable operations performed by personnel without basic knowledge or training do not constitute a fault of RoboSense and may cause damage to equipment and personal property.

- 1) Please read the product manual in detail before using the device.
- 2) Prohibit illegal operations.
- 3) Before working, personnel must undergo training and obtain relevant construction qualifications.
- 4) Have some basic knowledge of computer data connection, electrical, and so on.

## 1.5 Work Safety and Special Hazards

**!** To avoid risks of accidents, damage to sensor or violating of your product warranty, please read and follow the instructions in this manual carefully before operating the product.

- 1) Laser Safety: This product meets the following standards for laser products: IEC 60825-1:2014.

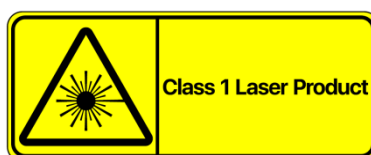

- 2) High Temperature Warning: Please pay attention to the overheating sign on the LiDAR surface to avoid a hot LiDAR surface that may lead to sensor failure

or undesirable consequences.



- 3) Retain Instructions: The safety and operating instructions should be retained for future reference.
- 4) Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
- 5) Servicing: Except for what's described in this manual, the sensor has no field serviceable parts. For servicing, please contact RoboSense sales or the authorized distributors.

## 2 Product Description

### 2.1 Product Overview

Airy is a new type of short-range 3D LiDAR specifically designed by RoboSense to eliminate blind spots. It is primarily used in applications such as robot environment perception, autonomous vehicle environment perception, drone mapping, and smart cities.

Airy adopts RoboSense innovative signal processing technology, allowing for a minimum detection distance as close as 10 centimeters. With its hemispherical ultra-wide field of view design, it can effectively detect various extremely close-range obstacles over a large area.

Currently, Airy is divided into three versions due to different usage scenarios- Airy-H, Airy-V and Airy-G. Users can choose the appropriate version based on their usage methods. Moreover, the FOV of Airy-G is different from the other two versions, and the ranging of different channels in the three versions varies. For details, please refer to Appendix D.

### 2.2 Product Structure

The structure diagram of Airy is shown in Figure 1 .



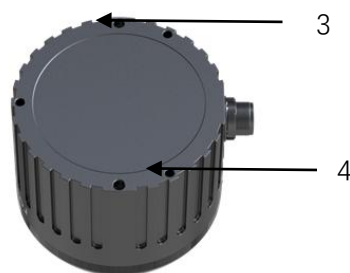


Figure 1 Product Structure Description

It mainly includes the following components:

1) Protective Cover

Both the emitted laser and returned laser need to pass through the specially designed arc-shaped protective cover. Therefore, any obstruction within the laser's field of view (FOV) is strictly prohibited.

2) Aviation Connector

The LiDAR body is connected to the interface cable via an aviation connector, enabling power supply and data transmission functionalities.

3) Mounting Holes

Used to support and fix the position and orientation between the LiDAR and the bracket, and to enhance installation efficiency and accuracy.

4) M3 Screw Mounting Holes

Used to secure the LiDAR to the mounting bracket with M3 screws.

## 2.3 FOV Distribution

Airy-h and Airy-g's FOV has a horizontal angular range of 0 to 360 degrees and a vertical angular range of 0 to 90 degrees, with an angular interval of approximately 0.947 degrees. The 96 lasers are defined as 96 channels, and their corresponding relationship with the real vertical angles is shown in Figure 2 .

The FOV of Airy-g in the horizontal direction ranges from 0 to 360 degrees, and in the vertical direction from 0 to 45 degrees, with an angle interval of approximately 0.947 degrees. The correspondence between the 48 channels and the actual vertical angles is shown in Figure 3 .

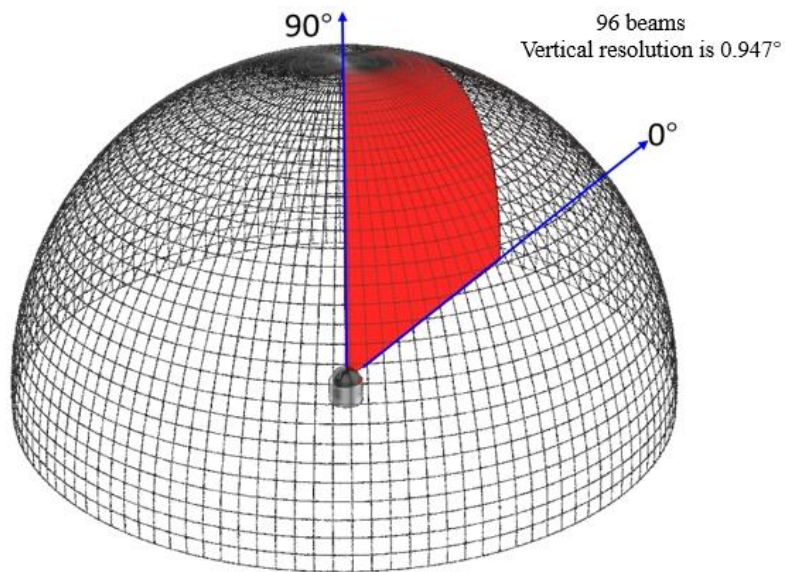


Figure 2 Airy-h and Airy-v FOV Illustration

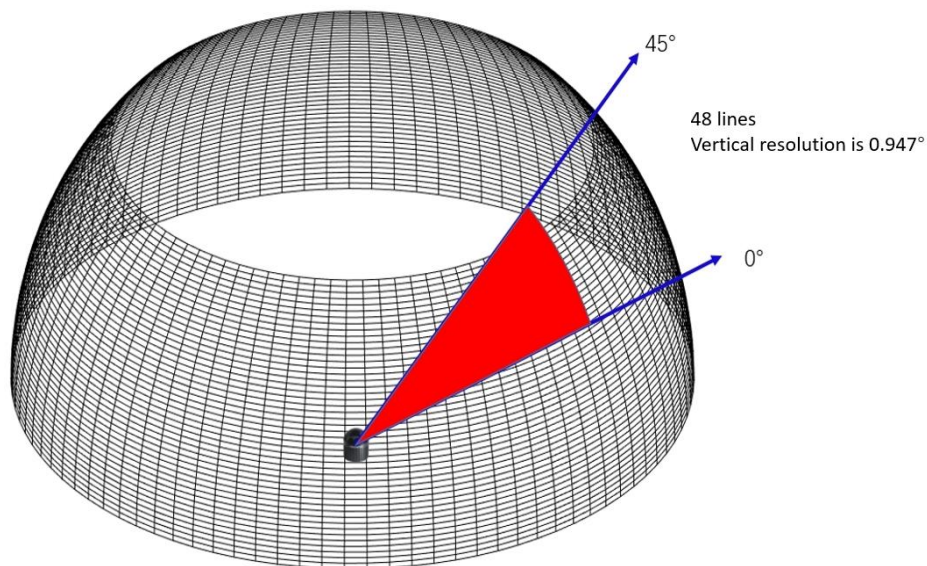


Figure 3 Airy-g FOV Illustration

Airy's design architecture and scanning sequence result in approximately 9ms of point cloud unavailability per second, meaning one out of every 10 frames of point cloud data has a gap of about 32°. The starting angle of this gap can be configured in mass production firmware, allowing users to set it to a position with minimal impact based on actual needs, shown in appendix A.2.2.

## 2.4 Specifications<sup>1</sup>

Table 1 Airy Specifications

Specifications			
Number of Channels	96	Horizontal Field of View (FOV)	0~360°
Laser Wavelength	940 nm	Vertical Field of View (FOV)	0° ~ 90° <sup>2</sup>
Laser Safety Level	Class1Eye-Safety	Horizontal Angular Resolution	0.4°
Measurement Range <sup>3</sup>	60 m(30 m @10% NIST)	Vertical Angular Resolution	0.947°
Blind Zone	0.1 m	Accuracy (Typical) <sup>4</sup>	1.5 cm (1 $\sigma$ )
Rotation Speed	600	Frame Rate	10 Hz
Number of Output Points	856,320 pts/s(Single Return Mode), 1,712,640 pts/s(Dual Return Mode)		
Ethernet Transmission Rate	100 MBps-TX		
Output Data Protocol	UDP Packets Over Ethernet		
Lidar Data Packet Content	Distance, Reflectivity, Timestamp, etc.		
Operating Voltage	9 V - 32 V	Dimensions	Diameter 60 mm × Height 63 mm
Product Power Consumption <sup>5</sup>	8 W(Typical)	Operating Temperature <sup>6</sup>	- 40°C ~ + 60°C
Weight	230g ± 20g (LiDAR Body)	Storage Temperature	- 40°C ~ + 85°C
Time Synchronization	GPS, PTP & gPTP	Protection Level	IP67 / IP6K9K
Product Model	Airy		

<sup>1</sup> The following data applies only to mass-produced products. Any samples, prototypes, or other non-mass-produced versions may not be applicable to these specification data. If you have any questions, please contact Robosense.

<sup>2</sup> The vertical field of view of Airy-g is 0 to 45 degrees ;

<sup>3</sup> The ranging capability is based on a 10% NIST diffuse reflectance target; test results may be affected by environmental factors, including but not limited to ambient temperature and light intensity.

<sup>4</sup> Measurement Accuracy is based on a 50% NIST diffuse reflection target, and the test results are affected by environmental factors, including ambient temperature and target distance. The accuracy value applies to most channels, but variations may exist between certain channels;

<sup>5</sup> Device Power Consumption test results are influenced by external environmental factors, including ambient temperature, target distance, and target reflectivity;

<sup>6</sup> Device Operating Temperature may be affected by external environmental factors, including lighting conditions and airflow variations;

## 2.5 Product Principle

### 2.5.1 Coordinate Mapping

As the LiDAR data packet contains only horizontal rotation angles and distance parameters, to present a three-dimensional point cloud, the polar coordinates (angle and distance) are transformed into Cartesian coordinates (x, y, z) according to the following equations:

$$\begin{cases} x = r \cos(\omega) \sin(\alpha) + R \cos(\alpha); \\ y = r \cos(\omega) \cos(\alpha) + R \sin(\alpha); \\ z = r \sin(\omega) + Z; \end{cases}$$

where r is the measured distance,  $\omega$  is the laser's vertical angle,  $\alpha$  is the laser's horizontal rotation angle, R is the plane radius from the optical center to the origin, Z is the height from the optical center to the origin, and x, y, z are the coordinates projected onto the Cartesian X, Y, Z axes.

### 2.5.2 Reflectivity Interpretation

Airy LiDAR provides reflectivity information to characterize the reflectance of measured objects. In Airy data, the calibrated reflectivity range is from 1 to 255.

### 2.5.3 Return Modes

#### 2.5.3.1 Return Modes Principle

Airy supports multiple return modes, including Strongest Return, Last Return, First Return, and Dual Return modes. In the Dual Return mode, detailed information of the target object is displayed, and the data volume is twice that of the Single Return mode.

Airy analyzes multiple return values received and outputs the strongest, last, first return or dual return value based on user selection, or outputs dual return values. In the Strongest Return mode, only the strongest reflected return value is output; in the Last Return mode, only the last detected return in the time domain is output.

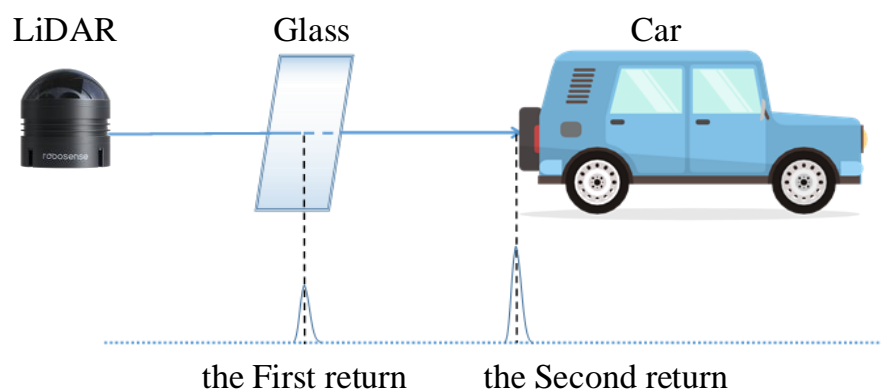


Figure 4 Dual Return Detection

**i** Note:

In Dual Return mode, when the laser hits multiple targets, and the distance between the targets is greater than 1 meter, the LiDAR can detect two echoes, as shown in Figure 4 .

### 2.5.3.2 Return Mode Flags

The default setting for Airy at the factory is Strongest Return mode. Users need to change this setting, they can configure it in the product echo mode parameters on the web. In DIFOP, the 300th byte is the flag bit for the return mode. For details, refer to Table 2.

Table 2 Return Mode and Flag Bit Reference Table

DIFOP Offset	Flag	Return Mode
1	00	Strongest Return
	01	First Return
	02	Last Return
	03	Dual Return

### 2.5.4 Phase Locking

Airy's phase locking function allows the device to emit lasers at specific angles when the sensor reaches a whole second.

Figure 5 illustrates Airy's setup with different phase angles. The red arrows indicate that at the whole second, the sensor rotates to  $0^\circ$ ,  $135^\circ$ , and  $270^\circ$  to emit lasers. Refer to Figure 13 for the coordinate system details.

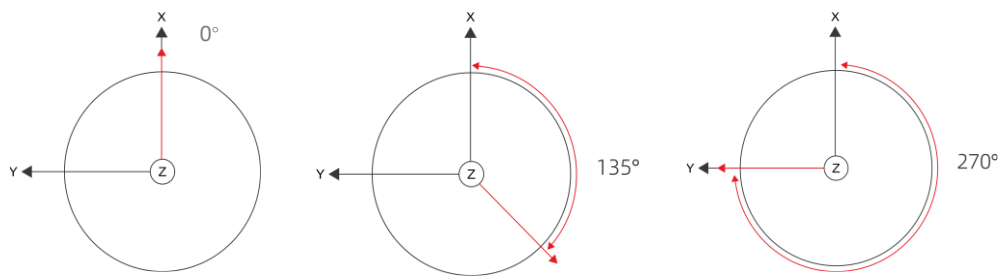


Figure 5 Airy Phase Lock Setting Illustration

The "Phase Lock" parameter setting is available in the Web interface under Setting > Phase Lock Setting. It allows users to set the locked phase angle, which should be an integer ranging from 0 to 360. For more details, refer to section 4.2 of the product manual.

## 2.5.5 Time Synchronization Method

Airy supports three time synchronization methods: GPS, PTP (IEEE 1588 V2 protocol), and gPTP (IEEE 802.1 AS protocol). Users can configure these settings through the Web interface. For more details, refer to section 4.2 of the product manual.

### 2.5.5.1 GPS Time Synchronization Principle

The GPS module continuously sends GPRMC data and PPS synchronization pulse signals to the product. The PPS synchronization pulse length should be between 20 to 200 ms, and the GPRMC data must be transmitted 10ms after the falling edge of the PPS synchronous pulse and completed between 300ms and 500 ms before the rising edge of the next PPS synchronous pulse. (it is recommended that GPRMC data be sent exactly in the middle of the two PPS pulse signals). The timing diagram is shown in Figure 6 .

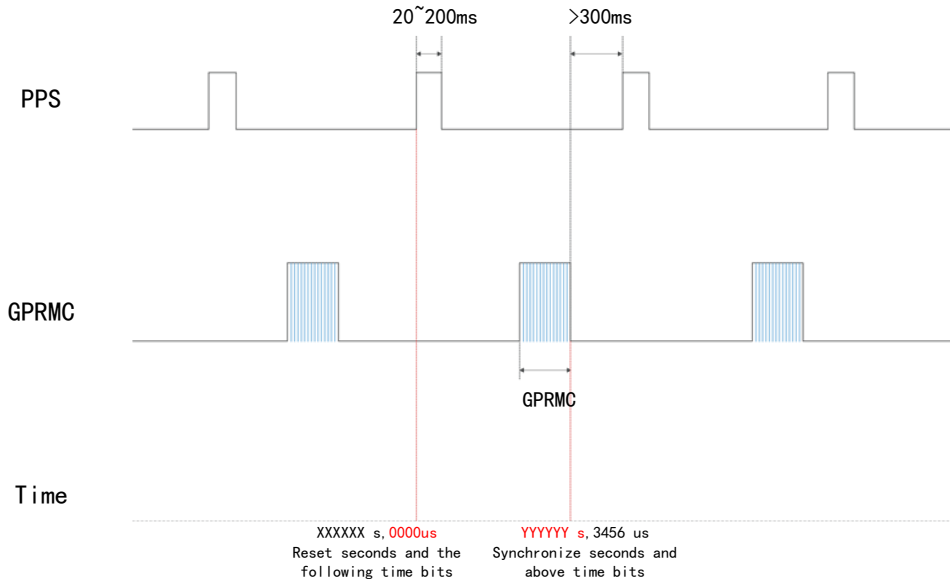


Figure 6 GPS Time Synchronization Timing Diagram

**i** Note:

To ensure accurate time synchronization, it is recommended to set the PPS pulse width between 20 to 200 ms. The completion time of GPRMC is recommended to be within 500 ms after the rising edge of PPS.

### 2.5.5.2 GPS Time Synchronization Usage

The GPS\_REC interface of Airy LiDAR adopts the RS232 electrical level protocol.

Refer to Table 3 for the pin definition.

Table 3 Product Time Synchronization Pin Definitions

Communication	Receiving Pin Definition	
	GPS GPRMC	GPS PULSE
RS232	RS232 Receives serial data with RS232 electrical level standard output from the GPS module	Receives positive synchronization pulse signal output from the GPS module, with a voltage requirement of 3.0 ~ 15.0 V

The external GPS module needs to set the output serial port baud rate to 9600 bps, 8 data bits, no parity bit, and 1 stop bit. Airy only reads GPRMC-formatted data sent by the GPS module. The standard format is as follows:

\$ GPRMC,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,<10>,<11>,<12> \* hh

<1> UTC time

<2> Positioning status: A = valid positioning, V = invalid positioning

<3> Latitude

- <4> Latitude hemisphere N (Northern Hemisphere) or S (Southern Hemisphere)
- <5> Longitude
- <6> Longitude hemisphere E (Eastern Longitude) or W (Western Longitude)
- <7> Ground speed
- <8> Ground course
- <9> UTC date
- <10> Magnetic declination
- <11> Magnetic declination direction: E (East) or W (West)
- <12> Mode indication (A = Autonomous positioning, D = Differential, E = Estimated, N = Data invalid)

\*hh at the end represents the XOR sum of characters from \$ to \*

 Note:

- 1) The GPS\_REC interface specification on the Airy power box is SM2.54 male connector, the pin definitions are shown in Figure 9 ;
- 2) The interval for sending 1 PPS pulse should be controlled within  $1s \pm 200$  us;
- 3) The status bit in the GPRMC message must be valid for A to allow time synchronization;
- 4) Airy is compatible with most GPRMC message formats from GPS modules available in the market. If any compatibility issues are found during use, please contact RoboSense.

### 2.5.5.3 PTP Synchronization Principle

PTP (Precision Time Protocol, IEEE 1588V2 protocol) is a time synchronization protocol used for high-precision time synchronization between devices. It can also be used for frequency synchronization between devices. Compared to various existing time synchronization mechanisms, PTP offers the following advantages:

- 1) Compared to NTP (Network Time Protocol), PTP can meet higher precision time synchronization requirements. NTP generally achieves sub-millisecond level time synchronization accuracy, while PTP can reach sub-microsecond level accuracy.
- 2) Compared to GPS (Global Positioning System), PTP has lower construction and maintenance costs.

#### 2.5.5.4 gPTP Synchronization Principle

gPTP (general Precise Time Protocol, IEEE 802.1AS protocol) is a derivative protocol of PTP in Time-Sensitive Networking (TSN). The synchronization mechanism uses the same P2P peer delay mechanism as the PTP protocol and adopts Ethernet L2 layer communication. Unlike PTP, gPTP requires the use of hardware-based timestamps, i.e., hardware timestamps, so the requirements for switches and master clocks are more stringent, complying with the IEEE 802.1AS protocol.

#### 2.5.5.5 PTP/gPTP Wiring Method

To use PTP/gPTP synchronization, the following preparations are required. Refer to section 3.4 of the product manual for connection details:

- 1) Select PTP/gPTP mode in the Web interface. See section 4.2 of the product manual for details.
- 2) PTP Master/gPTP Master time source (plug and play, no additional configuration required).
- 3) Ethernet switch.
- 4) Devices that support PTP/gPTP protocols and need time synchronization.

 Note:

- 1) The PTP Master device is a third-party device and is not included in the RoboSense shipment. The user needs to purchase it separately.
- 2) RoboSense products, as Slave devices, only receive time from the Master and do not judge the accuracy of the Master's clock source. If there are sudden changes in the time when parsing LiDAR point cloud data, please check if the time provided by the Master is accurate.
- 3) After LiDAR synchronization, when the Master is disconnected, the time in the point cloud data packet will be accumulated based on the LiDAR's internal clock. The time will be reset when the LiDAR is powered off and restarted.

## 3 Product Installation

### 3.1 Accessory Description

The standard accessories included with Airy LiDAR are listed in Table 4 for reference.

Table 4 Standard Accessory List

No.	Accessory Name	Specification	Quantity
1	LiDAR	Airy	1
2	Screw Pack	M3*8	3
3	Screw Pack(optional)	M3*12	3
4	Interface Cable(optional)	1.5m	1
5	Power Adapter(optional)	DC12 V × 3.34 A / 40 W	
6	Power Cable(optional)	1.2 m	
7	Ethernet Cable(optional)	1.5 m	1
8	Product Packing List and Shipment Inspection Report	/	1

**i** For specific requirements, refer to the commercial agreement.

### 3.2 Mechanical Installation

The structural installation diagram of the LiDAR is shown in Figure 7 .

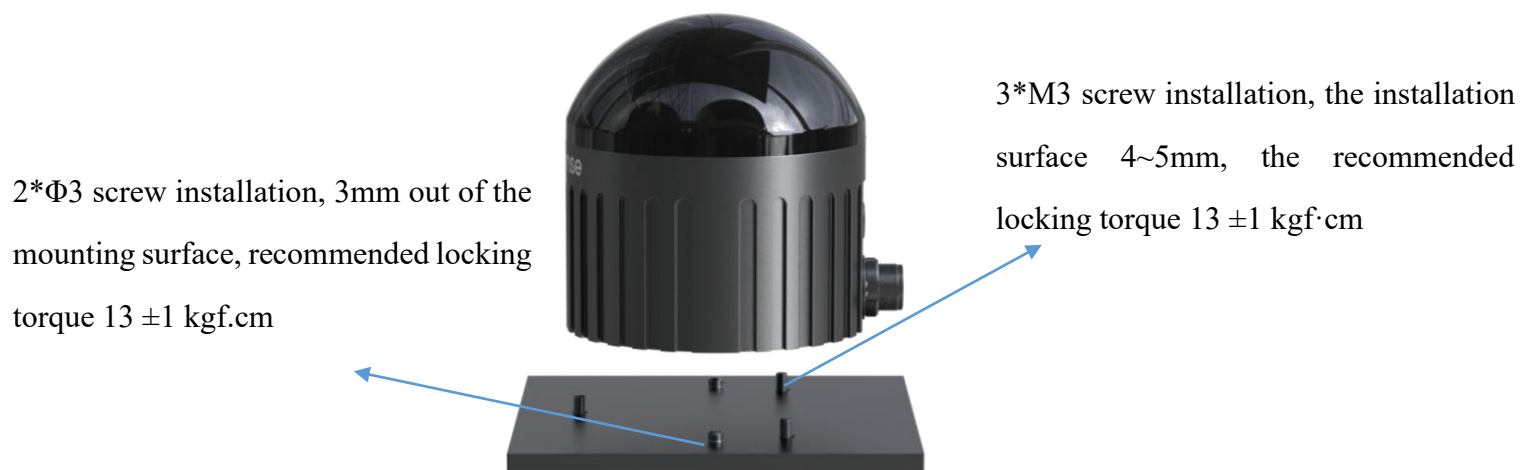


Figure 7 LiDAR Structure Installation Diagram

#### 1) Screw Specifications:

- a) GB / T70.1, M3 × 8, hex socket cap head, strength grade 10.9, with anti-

loosening;

## 2) Installation requirements

- a) The flatness of the installation surface should be better than 0.15 mm;
- b) Use 3 M3 screws to install on the base, extending 4.5 mm from the installation surface. Recommended tightening torque is  $13 \pm 1$  kgf.cm;
- c) Use 2  $\Phi 3$  positioning pins on the base for installation alignment, with a height of 3 mm;
- d) When installing the LiDAR, if both the top and bottom of the LiDAR have contact surfaces, ensure the distance between the surfaces is greater than the height of the LiDAR to avoid compressing it;
- e) When routing the LiDAR cables, do not make them overly tight (leave an installation margin of more than 2 cm) to ensure a degree of slack in the cables.

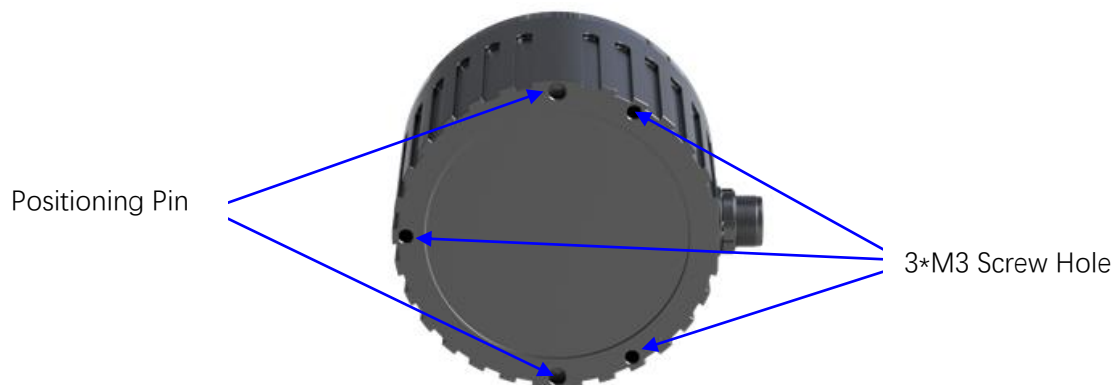


Figure 8 Illustration of the Positioning Pins and Screws on the Bottom of the LiDAR

## 3) Bracket Stiffness and Strength Requirements:

- a) The fixed bracket needs to have good rigidity for securely mounting the LiDAR and maintaining the LiDAR in a stable state under various conditions. Therefore, the first-order modal frequency of the LiDAR and its fixed bracket should be at least greater than 50 Hz.
- b) The LiDAR will undergo various random vibrations and mechanical shocks during use. Under these conditions, the bracket needs to withstand significant loads, so it also requires sufficient strength. The bracket material is recommended to be aluminum alloy (thickness above 4 mm) or galvanized steel plate (thickness above 2 mm). Strengthening ribs should be added in

various directions to improve its rigidity and strength as much as possible. It is advisable to avoid designing structures with sharp angles, corners less than 0.3 mm, or notches, which may cause stress concentration. The bracket strength needs to be verified through simulation.

- 4) Heat Dissipation Requirements:
  - a) The bracket material is recommended to be made of aluminum alloy or galvanized steel plate with a thermal conductivity greater than 50 W/m·K. Some heat dissipation fins should be added to the bracket, with reasonable spacing, height, and direction of the fins to increase the heat dissipation area. The direction should align with the air convection direction for more effective heat dissipation.
  - b) Ensure that the LiDAR base or top cover is not covered with non-metallic materials to avoid affecting the overall heat dissipation, leading to excessive temperature rise of the LiDAR.
  - c) If you cannot ensure proper heat dissipation, please communicate with our Field Application Engineer (FAE) in advance to determine a suitable cooling solution and prevent the LiDAR from overheating, which could affect the product's performance or lifespan.

### 3.3 Interface Description

#### 3.3.1 Aviation Plug Interface and Definitions

The cable aviation plug on the Airy LiDAR side is shown in Figure 9 .

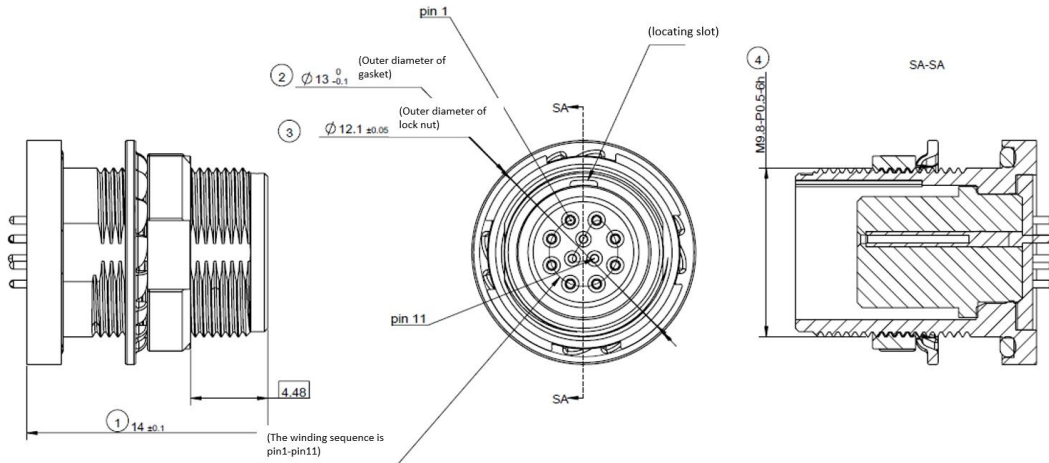


Figure 9 Aviation Plug Interface Pin Numbers

The specific pin definitions of the aviation plug interface on the LiDAR side are shown in Table 5.

Table 5 Aviation Plug Interface Pin Definitions

Pin No.	Spec	Signal
1	26AWG	2P(RX+)
2	26AWG	2N(RX-)
3	26AWG	1P(TX+)
4	26AWG	1N(TX-)
5	24AWG	GND
6	26AWG	VIN
7	24AWG	VIN
8	26AWG	GND
9	30AWG	GPS PPS
10	30AWG	SYNC_OUT1
11	30AWG	GPS GPRMC

### 3.3.2 Interface Cable (Optional)

The optional accessory Interface cable for Airy is shown in the Figure 10 below:

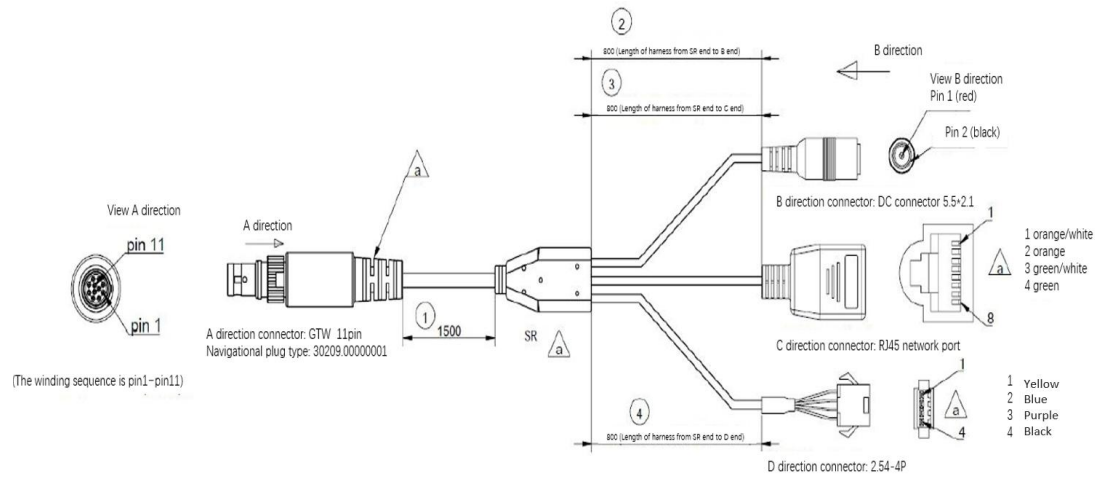


Figure 10 Interface Cable

For detailed specifications of the interfaces on the Interface cable, please refer to Table 6.

Table 6 Interface cable Interface Specifications

A End No.	Wire Spec	Wire Definition	A End Color	B End No.	C End No.	D End No.	D End Color
1	26AWG	2P(RX+)	Orange-white	\	1	-	\
2	26AWG	2N(RX-)	Orange	\	2	-	\
3	26AWG	1P(TX+)	Green-white	\	3	-	\
4	26AWG	1N(TX-)	Green	\	6	-	\
5	26AWG	GND	Black	2	\	-	\
6	26AWG	VIN	Red	1	\	-	\
7	26AWG	VIN	Red	1	\	-	\
8	26AWG	GND	Black	2	\	4	Black
9	30AWG	GPS PPS	Purple	\	\	3	Purple
10	30AWG	SYNC_OUT1	Blue	\	\	2	Blue
11	30AWG	GPS GPRMC	Yellow	\	\	1	Yellow

### 3.3.3 Power Interface

The Airy power interface uses a standard DC 5.5 - 2.1 interface.

If the LiDAR motor does not rotate after connecting the power supply, it may be due to a damaged cable. In this case, please contact Robosense.

### 3.3.4 RJ45 Ethernet Port

The Airy Ethernet interface follows the EIA/TIA568B standard.

### 3.3.5 Sync Interface

The Airy sync interface is defined as follows: GPS REC is for GPS GPRMC input, and GPS PULSE is for GPS PPS input.

**!** Important Note:

When connecting the "Ground" of Airy to an external system, the power supply negative pole ("Ground") of the external system and the GPS system's "Ground" must be non-isolated and connected together.

## 3.4 Quick Connection

The Airy network parameters can be configured, and the default factory setting uses fixed IP and port number mode, as shown in Table 7.

Table 7 Default Factory Network Configuration Table

Device	IP Address	MSOP Package Port Number	DIFOP Package Port Number
Airy	192.168.1.200	6699	7788
Computer	192.168.1.102		

When using the product, the user needs to set the computer's IP address to be in the same subnet as the product, for example, 192.168.1.x (where x can be any value between 1 and 254), and the subnet mask is 255.255.255.0. For unknown product network configuration information, please connect the product and use Wireshark to capture the output package of the product for analysis. The IP configuration and connection methods are as follows:

#### 1) Connecting the LiDAR

The connection method is shown in Figure 11 .

- a) Connect the LiDAR using the aviation plug.
- b) Connect the PC and LiDAR using the RJ45 Ethernet port.
- c) After powering on, the LiDAR can work normally.

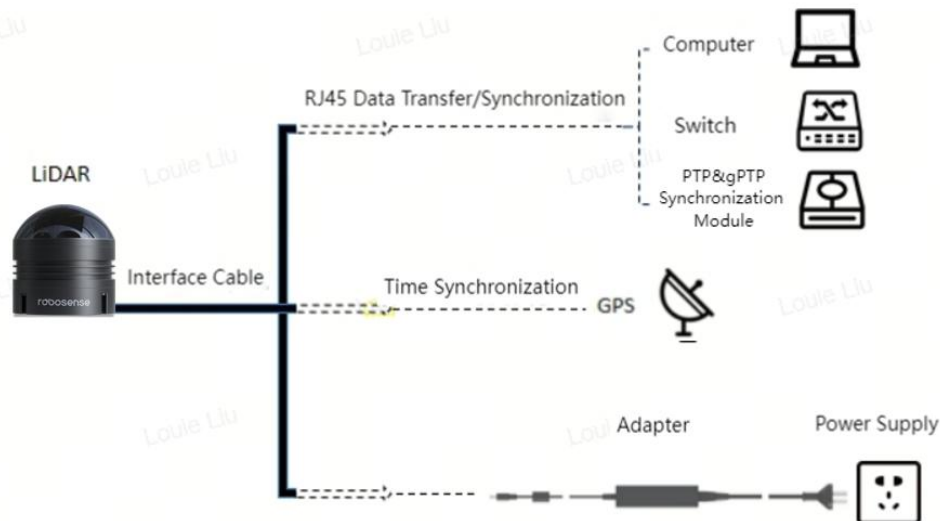


Figure 11 Interface Cable Connection Diagram

- 2) By using Wireshark to capture packets, analyze the ARP messages to perform local IP configuration.
  - a) Perform the following steps after the LiDAR and PC are connected: Start Wireshark (a third-party network analysis tool) and select the correct network interface to begin capturing packet.
  - b) Use the search box in Wireshark and enter "arp" to search for the mutual addressing packets between the LiDAR and PC, as shown in Figure 12 .

No.	Time	Source	Destination	Protocol	Length	Info
12	0.530047	SutengIn_1c:ae	Broadcast	ARP	60	who has 192.168.1.102? Tell 192.168.1.200
13	0.607377	HP_7a:ae:1d	Broadcast	ARP	42	who has 192.168.1.101? (ARP Probe)
68	1.570011	SutengIn_1c:ae	Broadcast	ARP	60	who has 192.168.1.102? Tell 192.168.1.200
69	1.607549	HP_7a:ae:1d	Broadcast	ARP	42	who has 192.168.1.101? (ARP Probe)
98	2.606604	HP_7a:ae:1d	Broadcast	ARP	42	ARP Announcement for 192.168.1.101
99	2.610787	SutengIn_1c:ae	Broadcast	ARP	60	who has 192.168.1.102? Tell 192.168.1.200
130	3.650056	SutengIn_1c:ae	Broadcast	ARP	60	who has 192.168.1.102? Tell 192.168.1.200
162	4.690102	SutengIn_1c:ae	Broadcast	ARP	60	who has 192.168.1.102? Tell 192.168.1.200
251	5.730812	SutengIn_1c:ae	Broadcast	ARP	60	who has 192.168.1.102? Tell 192.168.1.200

Figure 12 Analyzing ARP Packets

- c) In Figure 12 , the "SutengIn" in the Source column indicates the source information of the LiDAR, indicating that the Source IP is 192.168.1.200, which is the LiDAR's IP. The request is accessing 192.168.1.102, which is the PC's IP. If the local IP is not the requested access IP, then configure the PC's local IP as 192.168.1.102 as shown in step 3. If the access is successful, proceed to step 4.
- 3) Configuring the PC's Local IP

- a) In the Control Panel, go to "Network and Internet" and then "Network and Sharing Center." In the "View your active networks" section, click on the corresponding Ethernet connection to enter the corresponding "Ethernet Status," and then click on "Properties."
- b) Double-click "Internet Protocol Version 4 (TCP/IPv4)" to enter the IP information settings and use a static IP for configuration.
- c) Set the local IP address to 192.168.1.102, subnet mask to 255.255.255.0, and click "OK" to complete the PC's static IP setting.

#### 4) Connection Completed

 Note:

- 1) The time synchronization module (PTP & gPTP, GPS time synchronization module) is not included as a standard product. If you need to use these features, please purchase them separately and follow the connection method shown in Figure 11 .
- 2) The configuration of the local static IP provided above is only an example for Windows operating systems. For other operating systems, please refer to the actual instructions.

## 4 Product Usage

### 4.1 Product Coordinate System

The coordinates and rotation direction of the product are shown in Figure 13 .

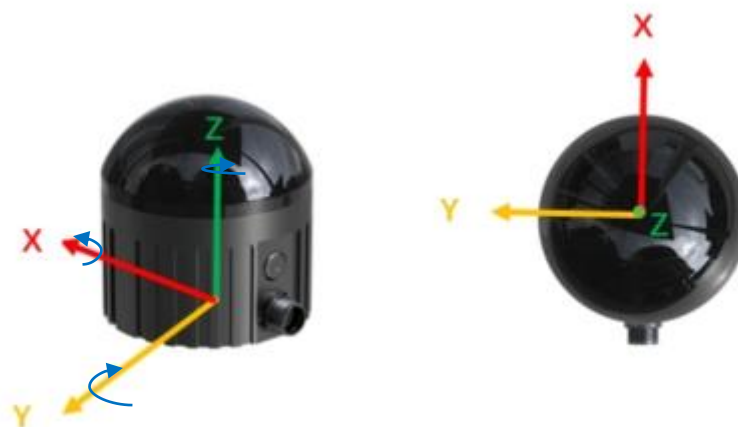


Figure 13 LiDAR Coordinate and Rotation Direction Illustration

- i** Note: The origin of the coordinates for the LiDAR is defined at the center of the LiDAR base.

### 4.2 Web UI Usage

#### 4.2.1 Web UI Functions

Airy supports parameter settings, viewing of operational information/status, and firmware upgrades through the Web UI interface.

The Airy web address changes according to the Device IP. The default Device IP is 192.168.1.200. If you have changed the Device IP, the web address will be the newly set IP.

#### 4.2.2 Accessing the Web UI Interface

Once the product is connected and correctly configured as required, use a computer browser to access the product's IP address (default Device IP: 192.168.1.200) to enter the Airy web homepage. The default page is the "Device" tab.

### 4.2.3 Using the Web UI Interface

For detailed instructions on using the Web UI interface, please refer to Appendix A of the product manual.

## 4.3 RSView Usage

For data visualization with Airy, you can use free tools such as Wireshark and tcpdump to obtain raw data. RSView can provide a more convenient way to visualize the raw data.

### 4.3.1 Software Functions

RSView enables real-time visualization of Airy data. It can also replay data saved in ".pcap" file format, but does not support ".pcapng" files at the moment.

In RSView, the distance measurement values obtained by Airy are displayed as points. It supports various custom colors to display data, such as reflection intensity, time, distance, horizontal angle, and laser beam index. The displayed data can be exported and saved in ".csv" format, and RSView version 3.1.3 and later versions support exporting data in ".las" format.

RSView includes the following features:

- 1) Real-time display of data via Ethernet.
- 2) Save real-time data as PCAP files.
- 3) Replay data from recorded PCAP files.
- 4) Various visualization modes, such as distance, time, horizontal angle, etc.
- 5) Display point data in tabular format.
- 6) Export point cloud data as CSV files.
- 7) Distance measurement tool.
- 8) Display multiple frames of replayed data simultaneously.
- 9) Show or hide individual laser beams from Airy.
- 10) Cropping display.

### 4.3.2 Installing RSView

RSView can be run on Windows 64-bit and Ubuntu 18.04 or higher operating systems. You can download the latest version of RSView software compressed package from the Robosense official website (<https://www.robosense.ai/en>). After downloading, make sure the extraction path does not contain Chinese characters. The software does not require installation; simply run the executable file after extraction to use it.

### 4.3.3 Using RSView

After opening RSView, you can access the user guide by pressing the F1 button or by clicking on the "RS-LiDAR User Guide" option in the Help menu.

## 4.4 Communication Protocols

Airy communicates with a computer via Ethernet using UDP (User Datagram Protocol). The communication protocols between Airy and the computer fall into two categories, as described in Table 8.

Table 8 Protocol Overview

Protocol Name	Abbreviation	Function	Type	Packet Size	Send Interval
Main data Stream Output Protocol	MSOP	Point cloud data	UDP	1248 bytes	Approx. 444.44 us
Device Information Output Protocol	DIFOP	LiDAR information output	UDP	1248 bytes	Approx. 1 s

**i** Note:

- 1) Section 4.4 of the product manual describes and defines the payload (1248 bytes) of the protocols;
- 2) The Main Data Stream Output Protocol (MSOP) encapsulates the laser scanning data, including distance, angle, and reflection intensity, into packets for output;
- 3) The Device Information Output Protocol (DIFOP) outputs various configuration information about the current state of Airy.

### 4.4.1 MSOP and DIFOP Data Protocol

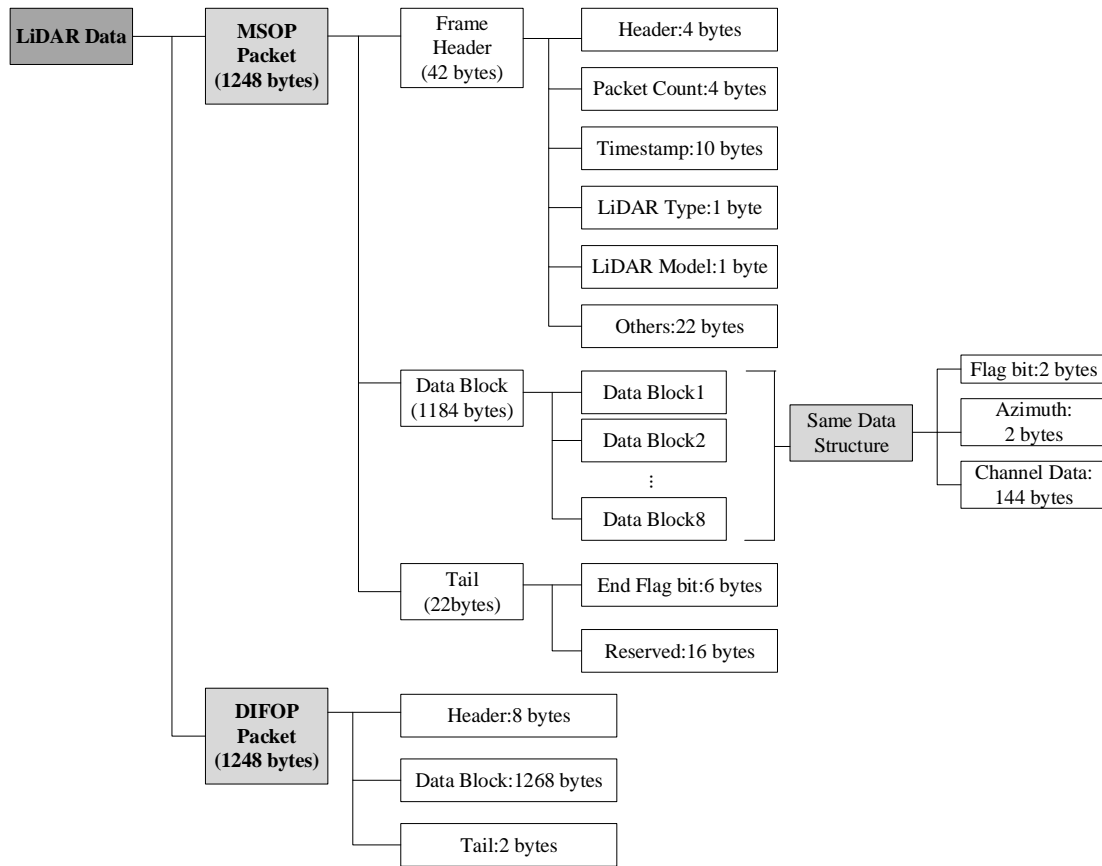


Figure 14 LiDAR Data Structure Diagram

#### 4.4.2 Main Data Stream Output Protocol (MSOP)

Main Data Stream Output Protocol: Main data Stream Output Protocol, abbreviated as MSOP.

I/O Type: Product output, computer parsing.

The default factory port number is 6699

##### 4.4.2.1 Header

The frame header (Header) is 42 bytes in total and is used to identify the start position of the data. For details on the data structure, refer to Table 9.

Table 9 MSOP Header Data Table

Information	Offset	Length (byte)	Description	Total Length (byte)
pkt_head	0	4	0x55AA055A	
REVO	4	8	/	
pktent	12	4	Packet transmission cycle count: 0-65535	

REV	16	4	/	42
timestamp	20	10	Timestamp, first 6 bytes indicate seconds, last 4 bytes indicate nanoseconds	
REV	30	1	/	
lidar_type	31	1	0x31: airy	
lidar_model	32	1	0x02:96 beams;	
REV	33	9	/	

**i** Note:

The defined timestamp is used to record the system time with a resolution of 1  $\mu$ s. For details, refer to the time definition in Appendix C.9 of the product manual.

#### 4.4.2.2 Data Block

As shown in Table 10, Data block is the part of sensor measurement value in MSOP package, with a total of 1184 bytes. It consists of eight Data Blocks, each of which is 148 bytes long.

Data block in the space of 148 bytes includes: a sign of 2 bytes, use 0xffee said; Azimuth of 2 bytes, indicating the horizontal rotation Angle information, each Angle information corresponds to 48 channel data.

Table 10 Data Block Definition

Description	Data Block (1184 bytes)				
Data Block Sequence	Data Block 1	Data Block 2	...	Data Block 7	Data Block 8
Flag	0xffee	0xffee	...	0xffee	0xffee
Horizontal Rotation Angle	Azimuth 1	Azimuth 1	...	Azimuth2	Azimuth2
Channel 1	Channel data 1	Channel data49	...	Channel data 1	Channel data49
Channel 2	Channel data 2	Channel data50	...	Channel data 2	Channel data50
...	...	...		...	...
Channel 48	Channel data 48	Channel data 96		Channel data 48	Channel data 96

**i** Note:

In dual-return mode, Data Block 1 and Data Block 2 represent the first return,

while Data Block 3 and Data Block 4 represent the second return.


### 1) Channel Data Definition

Channel data is 3 bytes, with the high two bytes used to represent distance information and the low one byte used to represent reflectivity information, as shown in Table 11 .

Table 11 Channel Data

Channel data (3 bytes)		
2 bytes Distance		1 byte Reflectivity
Distance1 [15:8]	Distance2 [7:0]	Reflectivity

 Note: Distance is 2 bytes, resolution is 0.5 cm.

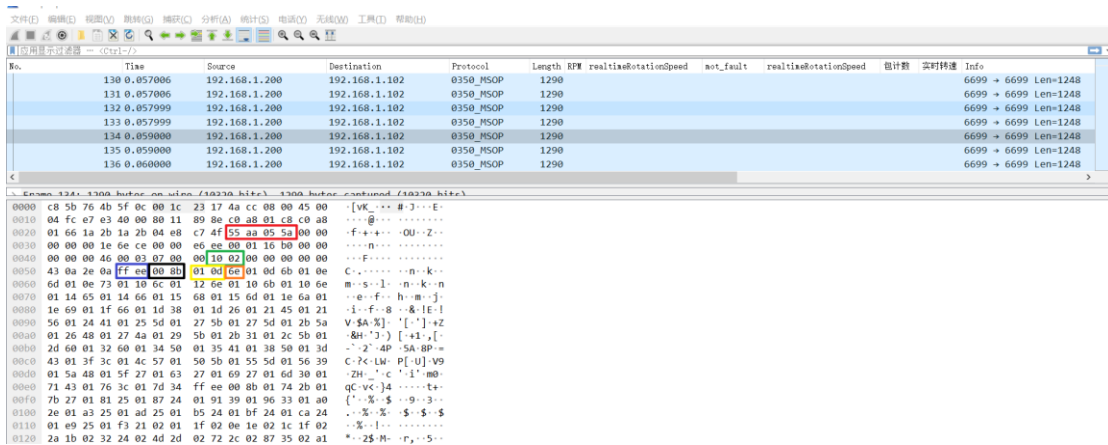

No.	Time	Source	Destination	Protocol	Length	FWP	realtimeRotationSpeed	not_fault	realtimeRotationSpeed	总计数	实时转速	Info
130	0.057006	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248
131	0.057006	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248
132	0.057999	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248
133	0.057999	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248
134	0.059000	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248
135	0.059000	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248
136	0.060000	192.168.1.200	192.168.1.102	0350_MSOP	1290							6699 → 6699 Len=1248

```

0000 c8 5b 76 4b 5f 0c 00 1c 23 17 4a cc 08 00 45 00  .[VK...#J...E...
0010 04 fc e7 e3 40 00 88 11 89 0e c8 a8 01 c8 c0 a8  .@.....
0020 01 66 1a 2b 1a 2b 04 e8 c7 4f 55 aa 05 5a 00 00  .f++++OU-Z...
0030 00 00 00 1e 6e ce 00 00 e6 ee 00 01 16 b0 00 00  .-F.....
0040 00 00 00 46 00 03 07 00 00 10 02 00 00 00 00 00  .-F.....
0050 43 0a 2e 0a ff ee 00 01 01 0d 0e 01 0d 6b 01 0e  .C.....n-k...
0060 6d 01 0e 73 01 10 6c 01 12 6e 01 10 6b 01 10 6e  .m-s-l-n-k-n...
0070 01 14 65 01 14 66 01 15 68 01 15 6d 01 16 6a 01  .e-f-h-m-j...
0080 1e 69 01 1f 66 01 1d 38 01 1d 26 01 21 45 01 21  .i-f-8-&|E-I...
0090 56 01 24 41 01 25 5d 01 27 5b 01 27 5d 01 2b 5a  .V$A%] '['+Z...
00a0 01 26 48 01 27 4a 01 29 5b 01 2b 31 01 2c 5b 01  .&H'J') [+1,[...
00b0 2d 60 01 32 60 01 34 50 01 35 41 01 38 50 01 3d  .-j-4P-5A8P+...
00c0 43 01 3f 3c 01 4c 57 01 50 5b 01 55 5d 01 56 39  .C-Z-LM-P[Q]V9...
00d0 01 5a 48 01 5f 27 01 63 27 01 69 27 01 6d 30 01  .ZH'c 'i'm0...
00e0 71 43 01 76 3c 01 7d 34 ff ee 00 8b 01 74 2b 01  .qC-v<]4 ----t+...
00f0 7b 27 01 81 25 01 87 24 01 91 39 01 96 33 01 a0  .['%-$-9-3-...
0100 26 01 a3 25 01 ad 25 01 b5 24 01 bf 24 01 ca 24  .-%-X-$-$-$-$...
0110 01 e9 25 01 f3 21 02 01 1f 02 0e 1e 02 1c 1f 02  .%-[.....
0120 2a 1b 02 32 24 02 4d 2d 02 72 2c 02 87 35 02 a1  .*~2$-N-~r,-5...

```

Figure 15 MSOP Packet illustration

Red Box: Header ID

Green Box: LiDAR Type and LiDAR Model

Blue Box: Data Block Flag

Black Box: Azimuth Value for Channel data 1

Yellow Box: Distance Value for Channel data 1

Orange Box: Reflectivity Value for Channel data 1

**The distance value of the data packet is calculated as follows:**

- The hexadecimal distance values in the data packet: 0x01, 0x0D
- Combine the data into 16 bits as a 16-bit unsigned integer, represented as:

0x010D

c) Convert the distance value to a decimal number: 269; then calculate based on the distance resolution

d) Result:  $269 \times 0.5 \text{ cm} = 134.5 \text{ cm} = 1.345 \text{ m}$

**Angle Value Calculation in Data Packet:**

a) The hexadecimal angle values in the data packet: 0x00, 0x8B

b) Combine the data into 16 bits as a 16-bit unsigned integer, represented as:  
0x008B

c) Convert to a decimal number: 139, then divide the decimal result by 100

d) Result:  $139^\circ / 100 = 1.39^\circ$

**Reflectivity Value Calculation in Data Packet:**

a) The hexadecimal reflectivity value in the data packet: 0x6E

b) Convert to a decimal number: 110

c) The resulting reflectivity value is 110

2) Angle Value Definition:

In each Block, the angle value output by Airy is the angle at which the first channel laser rangefinding occurs. This angle value is derived from the angle encoder, where the zero position of the angle encoder is the zero point of the angle.

The resolution for horizontal rotation angle values is  $0.01^\circ$ .

#### 4.4.2.3 Tail

Frame Tail (Tail) is 6 bytes long, with 4 bytes reserved for information and 2 bytes set to 0x00, 0xFF.

#### 4.4.3 Device Info Output Protocol (DIFOP)

Device Info Output Protocol, abbreviated as DIFOP, is used for product output and computer reading.

I/O Type: Product output, computer read.

The default port number is 7788.

DIFOP is an "output-only" protocol used to periodically send information such as

product serial number (S/N), firmware version, computer driver compatibility information, configuration information, angle information, running status, fault diagnosis, etc., to users. Users can read DIFOP to interpret specific information about the currently used product.

A complete DIFOP packet has a data format structure of synchronization header, data area, and tail. Every packet has 1248 bytes totally. The basic structure of the data packet is shown in Table 12.

Table 12 Data Format Structure of DIFOP Packet

No.	Information	Offset	Length (byte)	Description
1	DIFOP header	0	8	0xA5 0xFF 0x00 0x5A 0x11 0x11 0x55 0x55
2	Motor Speed Setting	8	2	Appendix C.1
3	Ethernet Source IP Address	10	4	Appendix C.2
4	Ethernet Destination IP Address	14	4	
5	LiDAR MAC Address	18	6	
6	MSOP Port	24	2	
7	Reserved	26	2	
8	DIFOP Port	28	2	
9	Reserved	30	10	
10	Mainboard Firmware Version	40	5	Appendix C.3
11	Baseboard Firmware Version	45	5	Appendix C.4
12	APP Firmware Version	50	5	Appendix C.5
13	Motor Firmware Version	55	5	Appendix C.6
14	Reserved	60	229	
15	LiDAR version	289	1	0:Airy-h 1:Airy-v 4:Airy-g
16	Reserved	290	2	

17	Product SN number	292	6	Appendix C.7
18	Reserved	298	2	
19	Return mode	300	1	
20	Time Sync Mode Setting	301	1	Appendix C.8
21	Time Sync Status	302	1	
22	Time	303	10	Appendix C.9
23	Reserved	313	60	
24	Real-time motor speed	373	2	Appendix C.10
25	Reserved	375	93	
26	Vertical Angle calibration	468	288	Appendix C.11
27	Horizontal Angle calibration	756	288	Appendix C.12
28	Mainboard Total Input Voltage	1044	2	Appendix C.13
29	Reserved	1046	20	
30	Device Input Voltage	1066	2	Appendix C.14
31	Baseboard 12V Voltage	1068	2	Appendix C.15
32	Reserved	1070	10	
33	Mainboard Transmit Temperature	1080	2	Appendix C.16
34	Reserved	1082	10	
35	IMU Calibration Data	1092	28	Appendix C.17
36	Reserved	1120	126	Reserved
37	Frame Tail	1246	2	0x0F 0xF0

**i** Note:

- 1) The Header (DIFOP Identification Header) consists of the bytes 0xA5, 0xFF, 0x00, 0x5A, 0x11, 0x11, 0x55, 0x55, and can be used as a check sequence for

the packet.

2) The Tail contains the bytes 0x0F, 0xF0.

The definition and usage of each item's registers can be found in detail in Appendix A of the product manual. The corresponding relationship is specified in the Remarks column of Table 12.

#### 4.4.4 IMU Data Stream Output Protocol

I/O Type: Product output, computer read.

The default port number is 6688.

The IMU output is the attitude information of IMU in the product, which can be used to adjust the external parameters of the customer's products. The data format structure of a complete IMU packet is frame header, data area, and frame tail. Each packet contains 51 bytes. The basic structure of the packet is shown in 0.

Table 13 IMU data format structure

No.	Information	Offset	Length (byte)	Description	Remark
1	IMU header	0	4	0xAA 0x55 0x5A 0x05	
2	Time	4	10	UTC time format. The first 6 bytes are second timestamps, and the last 4 bytes are microsecond timestamps.	
3	AccelX	14	4	X-axis acceleration value, signed, original value.	Original value is converted to the actual values associated with range, such as range of +/- 16g, the actual acceleration value is: original value*16/32768(unit:g). g value is 9.80665 m/s <sup>2</sup>

4	AccelY	18	4	Y-axis acceleration value, signed, original value.	As above
5	AccelZ	22	4	Z-axis acceleration value, signed, original value.	As above
6	GyroX	26	4	X-axis angular velocity value, signed, original value.	Original value is converted to the actual values associated with range, such as the range is +/- 2000 dps, the actual angular velocity value is original value*2000/32768*PI/180 (unit:rad/s)
7	GyroY	30	4	Y-axis angular velocity value, signed, original value.	As above
8	GyroZ	34	4	Z-axis angular velocity value, signed, original value.	As above
9	Internal temperature	38	4	IMU internal temperature, signed, resolution 0.01 degrees.	
10	ODR	42	1	Data output frequency	0:25Hz 1:50Hz 2:100Hz 3:200Hz 4:1000Hz
11	AccelFsr	43	1	Range of the accelerometer	0: +/- 2g 1: +/- 4g 2: +/- 8g 3: +/- 16g

---

12	GyroFsr	44	1	Range of the gyroscope	0: +/- 250 dps 1: +/- 500 dps 2: +/- 1000 dps 3: +/- 2000 dps
13	Package counter	45	4	The value is u32, starting with 1	
14	Frame tail	49	2	0xF0 0x0F	

## 5 Product Maintenance

### 5.1 Transportation and Logistics

#### ! Important

Improper transportation can cause product damage!

- 1) The product should be packaged with shockproof and moisture-proof materials to avoid damage during transportation. It is recommended to use the original packaging;
- 2) Handle with care during transportation to avoid impact or dropping;
- 3) When receiving the goods, carefully check the delivery list for any damages (including the product and packaging);
- 4) If there is any transportation damage, refuse to accept the delivery and contact RoboSense promptly.

### 5.2 Storage

#### ! Important

Improper storage may cause product damage!

- 1) Store the product in an indoor environment with normal temperature and dry conditions;
- 2) Handle the product gently to avoid impact or dropping;
- 3) The product should be stored in a safe environment to avoid corrosion, mechanical impact, or exposure to environments exceeding the protection level;
- 4) Regularly inspect the condition of all components and packaging, and it is recommended to check every three months.

### 5.3 Product Cleaning

To ensure accurate perception of the surrounding environment, keep the RS-

LiDAR's circular protective cover clean.

### 5.3.1 Precautions

- ❗ Before cleaning the RS-LiDAR, carefully read and understand the content of this section. Improper cleaning may damage the product.
- ❗ When using the LiDAR in harsh environmental conditions, clean the surface regularly to keep the LiDAR clean. Otherwise, it may affect the normal operation of the LiDAR.

### 5.3.2 Required Materials

- 1) Clean and dust-free cloth;
- 2) Neutral solution at moderate temperature (such as soapy water, distilled water, 99% concentration of ethanol, etc.).

### 5.3.3 Cleaning Method

- 1) If the LiDAR surface is only covered with some dust:
  - a) Use a clean and dust-free cloth, dip it in a small amount of neutral solution;
  - b) Gently wipe the LiDAR surface;
  - c) Dry it with a clean and dry dust-free cloth.
- 2) If the LiDAR surface is covered with mud or other solid foreign objects:
  - a) First, spray clean water on the dirty part of the LiDAR surface to remove the mud or foreign objects (Note: Do not directly wipe off the mud with a dust-free cloth, as it may scratch the surface, especially the protective cover);
    - b) Then spray warm soapy water on the dirty part. The lubricating effect of the soapy water helps to remove the foreign objects. Gently wipe the LiDAR surface with a fiber cloth, but be careful not to scratch the surface;
    - c) Finally, rinse off the residual soap on the LiDAR surface with clean water (if there is still residue, clean it again with 99% ethanol) and dry it with a clean and dry dust-free cloth.

## 6 Fault Diagnosis

This chapter lists some common problems encountered during the use of the product and their corresponding troubleshooting methods. For details, refer to Table 14.

Table 14 Common Fault Troubleshooting Methods

Fault Phenomenon	Solution
The Product Motor Does Not Rotate	Check whether the connector cable on the aviation plug power/product side is loose or if the wiring harness is damaged.
The Product Keeps Restarting During Startup	<p>Check the input power connection and polarity;</p> <p>Check if the voltage and current of the input power meet the requirements (when 12V voltage is applied, the input current should be <math>\geq 2A</math>);</p> <p>Check if the installation plane of the product is level or if the screws on the bottom of the LiDAR are tightened too tightly.</p>
The Product Internally Rotates, But There is No Data	<p>Check if the LiDAR emits light normally;</p> <p>Check if the network connection is normal;</p> <p>Confirm if the computer-side network configuration is correct;</p> <p>Use other software (such as Wireshark) to check if the data is received;</p> <p>Disable the firewall and other security software that may block the network;</p> <p>Check if the power supply is normal;</p> <p>Try restarting the product.</p>
Wireshark Can Receive Data, But RSView Does Not Display Point Cloud	<p>Close the computer's firewall and run RSView through the firewall;</p> <p>Confirm that the computer's IP configuration matches the destination address set in the product;</p> <p>Confirm that the Sensor Network Configuration in RSView is set correctly;</p> <p>Confirm that the installation directory or configuration file storage directory of RSView does not contain any Chinese characters;</p> <p>Confirm that the data packets received by Wireshark are of the MSOP type.</p>

Table 14 (Continuation)

Fault Phenomenon	Solution
The Product Has Frequent Data Loss	<p>Confirm if there is a large number of other network packets or network conflicts in the network;</p> <p>Confirm if there are other network products sending a large amount of data in broadcast mode, causing sensor data blocking;</p> <p>Confirm if the computer's performance and interface performance meet the requirements;</p> <p>Remove all other network products and directly connect to the computer to confirm if data loss occurs.</p>
Unable to Synchronize GPS/PTP/gPTP Time	<p>Confirm if the synchronization mode has been switched to the correct mode on the web page;</p> <p>Under the GPS time synchronization mode:</p> <p>Confirm if the GPS module's baud rate is 9600 bps, 8 data bits, no parity bit, and 1 stop bit;</p> <p>Confirm if the GPS module outputs 3.3V TTL or RS232 level;</p> <p>Confirm if the 1PPS pulse is continuous and the wiring is correct;</p> <p>Confirm if the NMEA message format of GPRMC is correct;</p> <p>Confirm if the GPS module and interface box share the same ground;</p> <p>Confirm if the GPS module receives a valid fix;</p> <p>Confirm if the GPS module is validly positioned (outdoors);</p> <p>Under the PTP / gPTP time synchronization mode:</p> <p>Confirm if the PTP / gPTP Master synchronization protocol complies with the current PTP / gPTP protocol;</p> <p>Confirm if the PTP / gPTP Master is working properly.</p>
No Data Output After Passing Through the Router	Close the DHCP function of the router or set the IP address of the sensor to the correct IP address internally in the router.
ROS Driver Displays a Fixed Blank Area Rotating When Showing Point Cloud	<p>This phenomenon is normal. It occurs because the ROS driver splits the data into fixed packages for frame display.</p> <p>The blank part of the data will be displayed in the next frame.</p>
RSView software outputs point clouds as a single ray	For Windows 10 systems, set RSView to run in Windows 7 compatibility mode to resolve the issue.

 Note:

If the above troubleshooting steps fail to resolve the issue, please contact RoboSense for further assistance.

## 7 After-sales Service

If the solutions provided in Chapter 6 of the troubleshooting guide do not solve the problem, please promptly contact RoboSense.

Official Website: <https://www.robosense.cn/en/contact>

Email: [support@robosense.cn](mailto:support@robosense.cn)

Phone: +86-0755-86325830 / +86-15338772453


 Additional Information:

- 1) Please wait for a confirmation response from RoboSense after-sales service before sending the product back.
- 2) When sending the product back, please use the original packaging or an equivalent cushioned and moisture-resistant packaging.

## Appendix A Web UI operation

### A.1 Product information

The Lidar Web UI defaults to the product information page, as shown in Figure 16 :

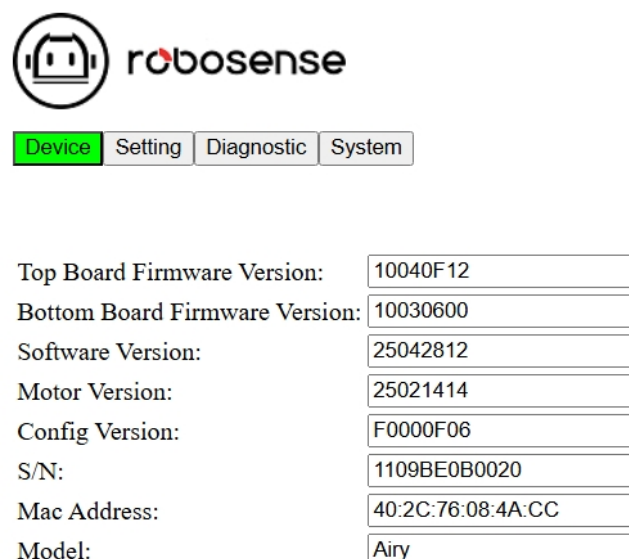

Top Board Firmware Version:	10040F12
Bottom Board Firmware Version:	10030600
Software Version:	25042812
Motor Version:	25021414
Config Version:	F0000F06
S/N:	1109BE0B0020
Mac Address:	40:2C:76:08:4A:CC
Model:	Airy

Figure 16 Web page information

- (1) Top Board Firmware Version indicates the mainboard firmware version;
- (2) Bottom Board Firmware Version indicates the baseboard firmware version;
- (3) Software Version indicates the version of software;
- (4) Motor Firmware Version indicates the motor version;
- (5) Config Version indicates the configuration version, where F0000F06 is Airy-h, F00E0F06 is Airy-v, and F0480F06 is Airy-g;
- (6) S/N indicates the serial number of the product;
- (7) Mac Address Indicates address of the Mac;
- (8) Model is the product name.

### A.2 Product parameter setting

#### A.2.1 General Setting

The "General Setting" bar at the end of the web page is the basic parameter setting page of LiDAR, where you can change the Settings of Device IP, port number, echo mode, speed and Angle trigger. The schematic diagram and function description are shown in Figure 17 :

The screenshot shows the RoboSense web interface with the 'General Setting' tab selected. The interface includes a navigation bar with 'Device', 'Setting', 'Diagnostic', and 'System' tabs. The 'General Setting' section contains the following fields and options:

- Device IP Address: 192.168.1.200
- Device IP Mask: 255.255.255.0
- Device IP Gateway: 192.168.1.1
- Destination IP Address: 192.168.1.102
- MSOP Port Number(1025-65535): 6699
- DIFOP Port Number(1025-65535): 7788
- Return Mode: First
- Time Synchronization Source: PTP-GPTP
- PTP Domain Number(0-127): 0
- Respond To PeerDelayRequest: OFF
- No Leap Second: OFF
- Sync Timeout(1-255s): 5
- Unlock To Lock Threshold(1-255ms): 1
- Lock To Unlock Threshold(1-255ms): 20
- Operation Mode: High-Performance
- Phase Lock Setting(0-360): 0 DEG
- GPS Band Rate: 9600
- Imu Cntrl: ON
- Imu Port Number(1025-65535): 6688
- Imu Output Rate: 200Hz
- Accel Range: [-4g, 4g]
- Gyro Range: [-500, 500]dps
- Restore Default: OFF

A 'Save' button is located at the bottom of the settings list.

Figure 17 Web side Lidar setting information

- (1) Supports unicast (default)/broadcast mode. Set the Destination IP to 255.255.255.255 for broadcast mode, with the factory default being 192.168.1.102;
- (2) The data port of MSOP and DIFOP can be changed. The value ranges from 1025 to 65535;
- (3) The web can select the Strongest return(default)/Last return/first return and dual return modes from the Return Mode drop-down list;
- (4) The web can select GPS, PTP-E2E, PTP-P2P, PTP-GPTP, and PTP-E2E L2 from the "Time Synchronization Source" drop-down list to determine the time synchronization mode;
- (5) The time synchronization domain of PTP can be changed. The value ranges from 0 to 127;
- (6) Drop down "Respond To PeerDelayRequest" to select OFF (default) and ON to determine whether the LiDAR acts as the slave to respond to peer delay request requests from other nodes;
- (7) Drop down "No Leap Second" to select OFF (default) and ON to determine

- whether to respond to the leap second deviation setting of the announce packet;
- (8) Change the timeout period (5s by default) for the device to exit the time synchronization state due to the loss of the time master message. The value ranges from 1 to 255 seconds;
  - (9) Change the offset threshold (default: 1ms) of the device that switches from the non-synchronous state to the synchronous state. The value ranges from 1 to 255 ms.;
  - (10) Change the offset threshold (default: 20ms) between the master and the device that switches from the synchronous state to the non-synchronous state. The value ranges from 1 to 255 ms
  - (11) Drop down "Operation Mode" to select two working modes: Standby/High Performance (default). When the Standby mode is selected, the lidar motor and transmitter stop working;
  - (12) The Phase lock Angle of the device can be changed. The value ranges from 0 to 360 Degree;
  - (13) Drop down "GPS Baud Rate" to select GPS Baud rate, which can be 9600 (default), 14400, 19200, 38400, 43200, 57600, 76800, and 115200;
  - (14) Drop down "Imu Ctrl" to select OFF and ON (default) to determine whether to enable the control interface for the IMU function;
  - (15) Change the communication port of the IMU. The value ranges from 1025 to 65535;
  - (16) Drop down "Imu Output" Rate and select 25Hz/50Hz/100Hz/200Hz (default) to change the IMU output data update frequency;
  - (17) Drop down "Accel Range" and select [-2g,2g]/[-4g,4g] (default) /[-8g,8g]/[-16g,16g] to change the maximum acceleration range of the IMU accelerometer;
  - (18) Drop down "Gyro Range" and select [-250,250]dps/[-500,500]dps (default) /[-1000,1000]dps/[-2000,2000]dps to change the range of the IMU gyroscope;
  - (19) To confirm whether the "Restore Default" function is enabled, select OFF and ON from the Restore Default drop-down list.

## A.2.2 Performance Setting

The "Performance Setting" bar at the end of the web page is the LiDAR advanced parameter setting page, where the LiDAR reflectivity performance, drag point and rain and fog filtering and other advanced functions can be set. The schematic diagram and function description are shown in Figure 18 :

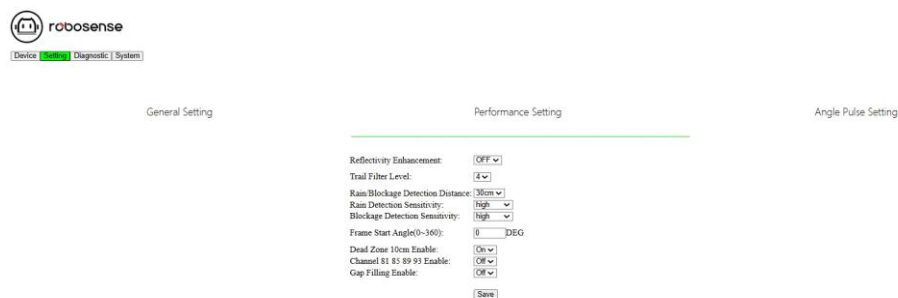


Figure 18 Advanced function setting

- (1) Drop down "Reflectivity Enhancement" to select OFF (default) and ON to determine whether the reflectivity enhancement function is enabled;
- (2) Drop down "Trail Filter Level" and select 1/2/3/4 (default)/5 to confirm the trailing filter level;
- (3) Drop down "Rain/Blockage Detection Distance" and select 30cm (default) /20cm/10cm to confirm the rain/blockage detection distance;
- (4) Drop down "Blockage Detection Sensitivity" and select high (default) /medium/low to control the sensitivity of Lidar to occlusion;
- (5) The Frame Start Angle of the device can be changed. The value ranges from 0 to 360 Degree;
- (6) Drop down "Dead Zone 10cm Enable" and select On(default)/Off to choose whether to enable the point cloud information within the blind zone;
- (7) Drop down "Channel 81 85 89 93" and select On/Off (default) to select whether to enable channels 81, 85, 89 and 93;
- (8) Drop down "Gap Filling Enable" and select On/Off(default) to select whether to perform information filling for the point cloud voids for 32 degree every ten frames.

### A.2.3 Angle Pulse Setting

The column "Angle Pulse Setting" on the webpage is the setting page of LiDAR Angle pulse trigger, where the LiDAR Angle trigger signal can be set. The schematic diagram and function description are shown in Figure 19 :

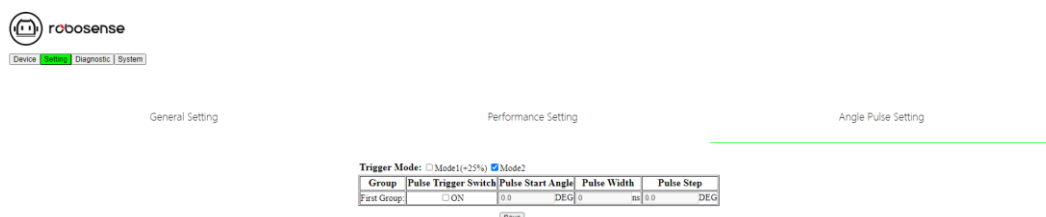


Figure 19 Angle pulse setting

- (1) Trigger Mode: There are two starting Angle modes. Mode 1 increases the starting pulse width by 25% (default), and mode 2 does not increase the starting pulse width;
- (2) Group: This column indicates the SYNC OUT group. Airy includes SYNC OUT1;
- (3) Pulse Trigger Switch: Enable or disable the Trigger function. When ON is selected for Pulse Trigger Switch, the editable state is enabled, and the editable state is gray when the Pulse trigger switch is disabled;
- (4) Pulse Start Angle: The corresponding start Angle can be set. The input value must be an integer;
- (5) Pulse Width: The corresponding pulse width can be set;
- (6) Pulse Step: The step can be set. The input value must be a floating point number with one decimal place reserved.

**i** Note:

- (1) The IP address of the Device and Destination IP address must be on the same network segment; otherwise, the connection may fail;
- (2) The MSOP and DIFOP values range from 1025 to 65535, and the MSOP port and DIFOP port cannot be the same port;
- (3) After the change is complete, click "Save" to save it. If a 'successful'

message is displayed, the setting takes effect.

### A.3 Product diagnostics/operational status

On this page, the operating status of LiDAR can be viewed in real time, including voltage, current, real-time speed, running time, temperature and other information, as shown in Figure 20 :

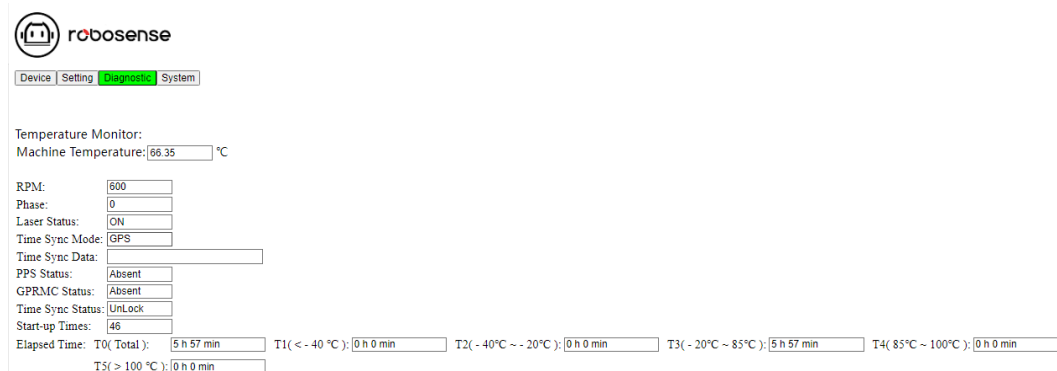


Figure 20 Web running status or fault diagnosis

- (1) View Machine Temperature to obtain the current product operating temperature;
- (2) View the RPM to obtain the current real-time rotational speed information;
- (3) View the Phase to obtain the current rotation phase of the product;
- (4) Laser Status has two states: "On" (default) and "Off". When the user sets the Standby mode, "Off" is used;
- (5) View the Time Sync Mode to obtain the time synchronization mode of the LiDAR;
- (6) View Time Sync Data to obtain time synchronization data of LiDAR;
- (7) View PPS Status to obtain the PPS status;
- (8) View GPRMC Status to obtain GPRMC status;
- (9) View Time Sync Status to obtain the current time synchronization status. Lock indicates that the time is locked successfully, Unlock indicates that the time is not synchronized successfully;
- (10) View Startup Times to obtain the total startup times of the current product, which is added up once after each power off and restart;
- (11) View Elapsed time to obtain the total running time and the accumulated

working time of the product under each temperature.

**i** Note:

- (1) The refresh rate of this page is 5 second;
- (2) If the voltage/current box turns red, check whether the product is in Standby mode. If not, check whether the product works properly.

## A.4 Product firmware upgrade

Click on the webpage "System", this page can upgrade the firmware of the product App, baseboard and mainboard, as follows:

- (1) Please contact RoboSense to get the firmware upgrade. When the firmware to be upgraded is ready, click "Select File", as shown in Figure 21 ;



Figure 21 Step1 Click Select File

- (2) Select the folder corresponding to the firmware to be upgraded, select the firmware to be upgraded, and click "Open" (no Chinese characters appear in the path), as shown in Figure 22 ;

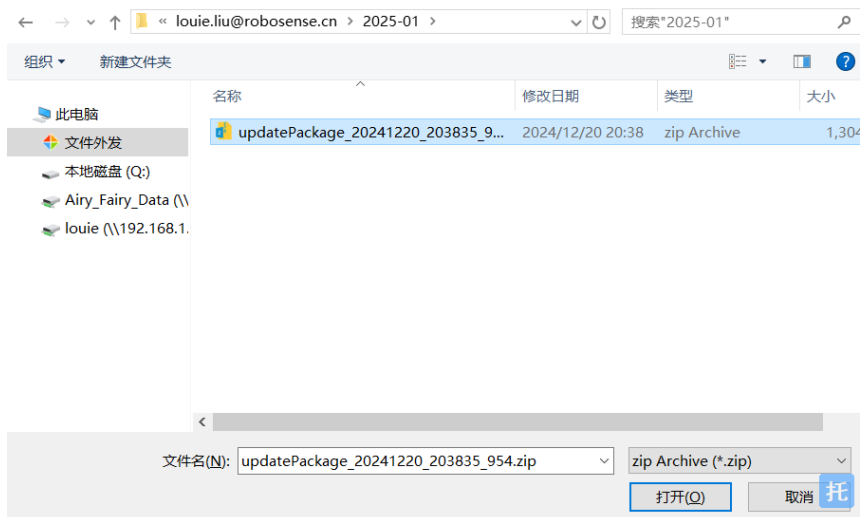


Figure 22 Select the file in the path where the upgrade package is stored

- (3) At this time, the file name of the firmware to be upgraded will be displayed on the web interface. Select the corresponding upgrade button to upgrade the

corresponding firmware, as shown in Figure 23 .

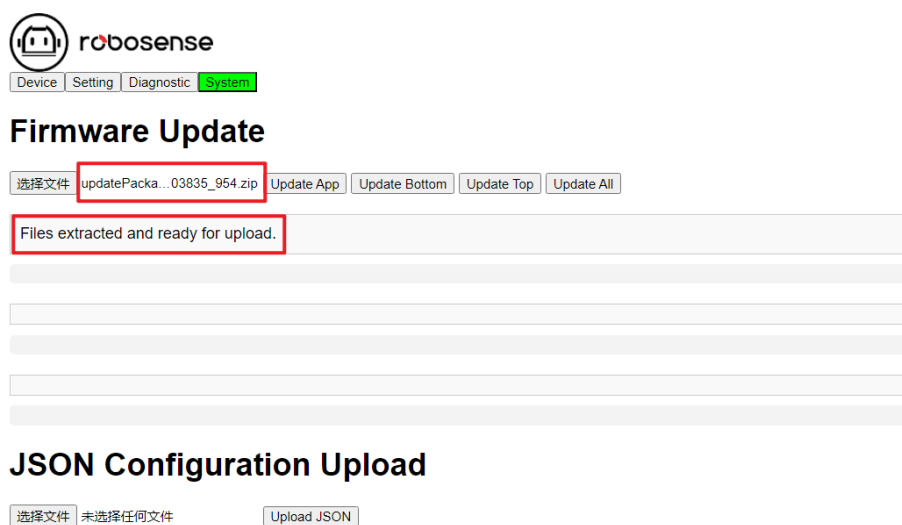


Figure 23 The page is displayed after the upgrade file is selected

- 1) The format of the upgrade package is Zip. The upgrade interface of the web only supports uploading Zip format file packages;
- 2) The upgrade package name must meet the following requirements. Otherwise, an error message may be displayed;
- 3) Main board upgrade file: sequence logic must be suffix ".bin";
- 4) Base board upgrade file: sequence logic necessary suffix ".bit";
- 5) Web App upgrade file: sequence logic necessary suffix ".hs\_fs".

## Appendix B ROS&ROS2 Package

rslidar\_sdk is the driver SDK for ROS platform. Please download it from RoboSense homepage on github or contact RoboSense to obtain it.

- (1) rslidar\_sdk relies on rs\_driver, which is the basic driver of RoboSense.  
Download rs\_driver from github;
- (2) If ROS2 is used, rslidar\_sdk also relies on rslidar\_msg, which is the msg definition file, which can be downloaded from github;
- (3) The driver SDK download package contains rich usage guidelines. Please read the README file and doc folder in the file before using the driver SDK.

 Note:

- 1) SDK address: [https://github.com/RoboSense-LiDAR/rsLiDAR\\_sdk](https://github.com/RoboSense-LiDAR/rsLiDAR_sdk)
- 2) rs\_driver address: [https://github.com/RoboSense-LiDAR/rs\\_driver](https://github.com/RoboSense-LiDAR/rs_driver)
- 3) msg address: [https://github.com/RoboSense-LiDAR/rslidar\\_msg](https://github.com/RoboSense-LiDAR/rslidar_msg)

## Appendix C DIFOP Data Definitions

This appendix supplements the definitions of each item in the DIFOP protocol outlined in Section 4.4.3, facilitating user understanding for product use and development. For calculations, big-endian mode is used, and "Value" represents the decimal number derived from the corresponding offset bytes.

### C.1 Motor Speed (MOT\_SPD)

Table 15 Motor Speed Settings

Motor Speed Settings (2 bytes)		
No.	byte 1	byte 2
Fun	MOT_SPD	

#### ① Register Description

- (1) This register is used to read the motor speed setting value.
- (2) For example, if the set value is 600 RPM, read byte 1 = 0x02 and byte 2 = 0x58, Value = 600.

### C.2 Ethernet (ETH)

Table 16 Ethernet

Register of Ethernet (22 bytes)								
No.	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7	byte 8
Fun.	LIDAR_IP				DEST_PC_IP			
No.	byte 9	byte 10	byte 11	byte 12	byte 13	byte 14	byte 15	byte 16
Fun.	MAC_ADDR						MSOP	
No.	byte 17	byte 18	byte 19	byte 20	byte 21	byte 22	byte 23	Byte 24
Fun.	Reserved		DIFOP		Reserved			
No.	byte 25	byte 26	byte 27	byte 28	byte 29	byte 30	\	\
Fun.	Reserved						\	

#### ① Register Description

- 1) LIDAR\_IP is the source IP address of the LiDAR, occupying 4 bytes.
- 2) DEST\_PC\_IP is the destination PC's IP address, occupying 4 bytes.
- 3) MAC\_ADDR is the MAC address of the LiDAR.

- 4) MSOP and DIFOP each occupy 2 bytes, and the source and destination port numbers are required to be identical.

### C.3 Mainboard Firmware Version (TOP\_FRM)

Table 17 Mainboard Firmware Version

Mainboard Firmware Version (5 bytes)					
No.	byte 1	byte 2	byte 3	byte 4	byte 5
Fun.	TOP_FRM				

#### **i** Register Description

- 1) This register is used to read the mainboard firmware version number.
- 2) For example, if byte 1 = 0x00, byte 2 = 0x10, byte 3 = 0x04, byte 4 = 0x0c, and byte 5 = 0x00, then the firmware version number is: 00 10 04 0c 00.

### C.4 Baseboard Firmware Version (BOT\_FRM)

Table 18 Baseboard Firmware Version

Baseboard Firmware Version (5 bytes)					
No.	byte 1	byte 2	byte 3	byte 4	byte 5
Fun.	BOT_FRM				

#### **i** Register Description

- 1) This register is used to read the baseboard firmware version number.
- 2) For example, if byte 1 = 0x00, byte 2 = 0x24, byte 3 = 0x12, byte 4 = 0x13, and byte 5 = 0x12, then the firmware version number is: 00 24 12 13 12.

### C.5 APP Firmware Version (SOF\_FRM)

Table 19 APP Firmware Version

APP Firmware Version (5 bytes)					
No.	byte 1	byte 2	byte 3	byte 4	byte 5
Fun.	SOF_FRM				

#### **i** Register Description

- 1) This register is used to read the APP firmware version number.
- 2) For example, if byte 1 = 0x00, byte 2 = 0x24, byte 3 = 0x12, byte 4 = 0x13, and byte 5 = 0x12, then the firmware version number is: 00 24 12 13 12.

## C.6 Motor Firmware Version (MOT\_FRM)

Table 20 Motor Firmware Version

Motor Firmware Version (5 bytes)					
No.	byte 1	byte 2	byte 3	byte 4	byte 5
Fun.	MOT_FRM				

### ① Register Description

- 1) This register is used to read the motor firmware version number.
- 2) For example, if byte 1 = 0x00, byte 2 = 0x24, byte 3 = 0x12, byte 4 = 0x12, and byte 5 = 0x25, then the firmware version number is: 00 24 12 12 25.

## C.7 Product Serial Number (SN)

Table 21 Product Serial Number

SN (6 bytes)						
No.	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6
Fun.	SN					

### ① Register Description

- 1) This register is used for the device serial number.
- 2) Similar to a MAC address, it consists of 6 bytes, representing the product serial number in hexadecimal.

## C.8 Time Sync Mode Setting (TIME\_SYNC\_INFO)

Table 22 Time Sync Information

Table 20 Time Sync Information (2 bytes)		
No.	byte 1	byte 2
Fun.	Time_Sync_Mode	Time_Sync_State

### ① Register Description

- 1) This register is used to read time synchronization information.
- 2) Byte 1 is the time synchronization mode status bit, defined as follows:  
0x00: GPS; 0x01: E2E-L4; 0x02: P2P; 0x03: gPTP; 0x04: E2E-L2
- 3) Byte 2 is the time synchronization success status bit, defined as follows:

0x00: Not synchronized; 0x01: Synchronized successfully

## C.9 Time (UTC\_TIME)

Table 23 Register of Time

Register of Time (10 bytes)										
No.	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7	byte 8	byte 9	byte10
Fun.	sec						us			

### **i** Register Description

- 1) This register is used to read time information.
- 2) The range of the microsecond (us) value: 0 ~ 999,999.

## C.10 Real-Time motor speed (REALTIME\_ROTATION\_SPEED)

Table 24 Real-time motor speed

No.	byte 1	byte 2
Fun.	REALTIME_ROTATION_SPEED	

### **i** Register Description

- 1) This register is used to read the real-time speed information of the motor.
- 2) The value is 2 bytes in hexadecimal format.
- 3) For example, byte1=0x01, byte2=0x28, the actual motor speed converted to decimal is 600.

## C.11 Vertical Angle calibration (COR\_VERT\_ANG)

Table 25 Vertical Angle calibration register

Vertical Angle calibration register (288bytes)									
No.	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7	byte 8	byte 9
Fun.	Channel 1 vertical Angle			Channel 2 vertical Angle			Channel 3 vertical Angle		
No.	byte 10	byte 11	byte 12	byte 13	byte 14	byte 15	byte 16	byte 17	byte 18
Fun.	Channel 4 vertical Angle			Channel 5 vertical Angle			Channel 6 vertical Angle		
No.	byte 19	byte 20	byte 21	byte 22	byte 23	byte 24	byte 25	byte 26	byte 27
Fun.	Channel 7 vertical Angle			Channel 8 vertical Angle			Channel 9 vertical Angle		
No.	byte 28	byte 29	byte 30	byte 31	byte 32	byte 33	byte 34	byte 35	byte 36
Fun.	Channel 10 vertical Angle			Channel 11 vertical Angle			Channel 12 vertical Angle		
No.	byte 37	byte 38	byte 39	byte 40	byte 41	byte 42	byte 43	byte 44	byte 45
Fun.	Channel 13 vertical Angle			Channel 14 vertical Angle			Channel 15 vertical Angle		

No.	byte 46	byte 47	byte 48	byte 49	byte 50	byte 51	byte 52	byte 53	byte 54
Fun.	Channel 16 vertical Angle			Channel 17 vertical Angle			Channel 18 vertical Angle		
No.	byte 55	byte 56	byte 57	byte 58	byte 59	byte 60	byte 61	byte 62	byte 63
Fun.	Channel 19 vertical Angle			Channel 20 vertical Angle			Channel 21 vertical Angle		
No.	...			...			...		
Fun.	...								
No.	byte 262	byte 263	byte 264	byte 265	byte 266	byte 267	byte 268	byte 269	byte 270
Fun.	Channel 88 vertical Angle			Channel 89 vertical Angle			Channel 90 vertical Angle		
No.	byte 271	byte 272	byte 273	byte 274	byte 275	byte 276	byte 277	byte 278	byte 279
Fun.	Channel 91 vertical Angle			Channel 92 vertical Angle			Channel 93 vertical Angle		
No.	byte 280	byte 281	byte 282	byte 283	byte 284	byte 285	byte 286	byte 287	byte 288
Fun.	Channel 94 vertical Angle			Channel 95 vertical Angle			Channel 96 vertical Angle		

### **i** Register Description

- 1) The Angle value is divided into positive and negative, and the vertical Angle of each channel is composed of 3 bytes, where the first byte represents positive and negative, and the second and third byte jointly constitute the Angle value.
- 2) If the first byte attribute is 0x00, the vertical Angle of the channel is positive; if the attribute is 0x01, the vertical Angle of the channel is negative.
- 3) The angular resolution is 0.01°.
- 4) For example, the value of the channel 5 register is byte 1=0x00, which is positive. byte 2=0x01 and byte 3=0x71 are converted to decimal 369. The vertical Angle of channel 5 is 3.69°.

## C.12 Horizontal Angle Calibration (COR\_HOR\_ANG)

Table 26 Horizontal Angle calibration register

<b>Horizontal Angle calibration register (288bytes)</b>									
No.	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7	byte 8	byte 9
Fun.	Channel 1 Horizontal Angle			Channel 2 Horizontal Angle			Channel 3 Horizontal Angle		
No.	byte 10	byte 11	byte 12	byte 13	byte 14	byte 15	byte 16	byte 17	byte 18
Fun.	Channel 4 Horizontal Angle			Channel 5 Horizontal Angle			Channel 6 Horizontal Angle		
No.	byte 19	byte 20	byte 21	byte 22	byte 23	byte 24	byte 25	byte 26	byte 27
Fun.	Channel 7 Horizontal Angle			Channel 8 Horizontal Angle			Channel 9 Horizontal Angle		
No.	byte 28	byte 29	byte 30	byte 31	byte 32	byte 33	byte 34	byte 35	byte 36
Fun.	Channel 10 Horizontal Angle			Channel 11 Horizontal Angle			Channel 12 Horizontal Angle		
No.	byte 37	byte 38	byte 39	byte 40	byte 41	byte 42	byte 43	byte 44	byte 45

Fun.	Channel 13 Horizontal Angle			Channel 14 Horizontal Angle			Channel 15 Horizontal Angle		
No.	byte 46	byte 47	byte 48	byte 49	byte 50	byte 51	byte 52	byte 53	byte 54
Fun.	Channel 16 Horizontal Angle			Channel 17 Horizontal Angle			Channel 18 Horizontal Angle		
No.	byte 55	byte 56	byte 57	byte 58	byte 59	byte 60	byte 61	byte 62	byte 63
Fun.	Channel 19 Horizontal Angle			Channel 20 Horizontal Angle			Channel 21 Horizontal Angle		
No.	...			...			...		
Fun.	...								
No.	byte 262	byte 263	byte 264	byte 265	byte 266	byte 267	byte 268	byte 269	byte 270
Fun.	Channel 88 Horizontal Angle			Channel 89 Horizontal Angle			Channel 90 Horizontal Angle		
No.	byte 271	byte 272	byte 273	byte 274	byte 275	byte 276	byte 277	byte 278	byte 279
Fun.	Channel 91 Horizontal Angle			Channel 92 Horizontal Angle			Channel 93 Horizontal Angle		
No.	byte 280	byte 281	byte 282	byte 283	byte 284	byte 285	byte 286	byte 287	byte 288
Fun.	Channel 94 Horizontal Angle			Channel 95 Horizontal Angle			Channel 96 Horizontal Angle		

### **i** Register Description

- 1) The Angle value is divided into positive and negative, and the horizontal offset Angle of each channel is composed of 3 bytes, where the first byte represents positive and negative, and the second and third byte jointly constitute the Angle value;
- 2) If the first byte attribute is 0x00, the channel horizontal offset Angle is positive, and if the attribute is 0x01, the channel horizontal offset Angle is negative;
- 3) The angular resolution is 0.01°;
- 4) For example, the value of the channel 5 register is byte 1=0x01, which is negative. byte 2=0x00 and byte 3=0xae are converted to decimal 174. The horizontal offset Angle of channel 5 is -1.74°

## C.13 Mainboard Input Voltage (MAINBOARD\_VOLTAGE)

Table 27 Mainboard Transmit Temperature

No.	byte 1	byte 2
Fun.	Mainboard Emit Voltage	

### **i** Register Description

- 1) This register is used to read the mainboard input voltage of the device.
- 2) Unit: V. The voltage value consists of 2 bytes. The calculation formula is:

$$\text{Mainboard Voltage} = \text{Value} / 100$$

## C.14 Device Input Voltage (MACHINE\_VOLTAGE)

Table 28 Device input voltage

No.	byte 1	byte 2
Fun.	Machine Voltage	

### **i** Register Description

- 1) This register is used to read the overall input voltage of the device;
- 2) Unit: V. The voltage value consists of 2 bytes. Formula: the Machine Voltage = Value / 100.

## C.15 Baseboard 12V Voltage (BOTTOMBOARD\_VOLTAGE (12V))

Table 29 Baseboard 12V voltage

No.	byte 1	byte 2
Fun.	Bottomboard Voltage (12V)	

### **i** Register Description

- 1) This register is used to read the device's backplane 12V voltage;
- 2) Unit: V. The voltage value consists of 2 bytes. Formula: Bottomboard Voltage (12 v) = Value / 100.

## C.16 Mainboard Emission Temperature (MAINBOARD\_EMIT\_TEMP)

Table 30 Mainboard transmit temperature

No.	byte 1	byte 2
Fun.	Mainboard Emit Temp	

### **i** Register Description

- 1) This register is used to read the mainboard emission temperature of the device;
- 2) Unit: °C. The voltage value consists of 2 bytes. Formula: Mainboard Emit Temp = Value / 100.

## C.17 IMU Calibration Data (IMU\_CALIB\_DATA)

Table 31 IMU Data

<b>IMU Calibration Data (28 bytes)</b>
--

No.	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7	byte 8
Fun.	q_x				q_y			
No.	byte 9	byte 10	byte11	byte 12	byte 13	byte 14	byte 15	byte 16
Fun.	q_z				q_w			
No.	byte 17	byte 18	byte19	byte 20	byte 21	byte 22	byte 23	byte 24
Fun.	x				y			
No.	byte 25	byte 26	byte27	byte 28				
Fun.	z							

**i** Register Description

- 1) The register is used to read the calibration data of the IMU relative to the LiDAR coordinate system;
- 2) This calibration data includes pose estimation and position offset, and the data type is 32-bit float (conforming to the IEEE 754 standard);
- 3) For example, the current bytes of x (byte 17~byte20) are 3b 8b 43 96, and its calculation method is as follows:
  - a) First, combine the four bytes into 32 binary numbers, that is, 00111011 10001011 01000011 10010110;
  - b) Separate the sign bit, the exponent field and the mantissa field. Among them, the sign bit is 31 bits, that is, 0, the exponent field is 23 to 30 bits, that is, 01110111, and the mantissum field is 0 to 22 bits, that is, 00010110100001110010110;
  - c) Calculate the values of each domain, according to IEEE 754. Here, the sign domain is 0, indicating a positive number. The exponent domain is 01110111, which converts to 119 in decimal, and the actual exponent is  $119 - 127 = -8$ . The mantissa domain is 00010110100001110010110. This binary number represents the fractional part, so it is first converted to a decimal fraction. This mantissa bit contains a hidden 1., so the mantissa is 1.00010110100001110010110, which converts to 1.088 in decimal.
  - d) Floating-point number, using the formula  $\text{Float32} = (-1)^{\text{sign domain}} * \text{mantissa domain} * 2^{\text{exponent domain}} = (-1)^0 * 1.088 * 2^{-8} = 0.00425$

## Appendix D Channel distance measuring ability and emission offset corresponding table

There are 8 block in each MSOP package. Each block have data of 48 channels. So each MSOP package have 4 column point cloud. The ranging of different versions of Airy varies. The ranging capabilities and emission offset of different channels of Airy-h are shown in Table 32.

Table 32 Airy-h ranging capability and emission offset

Channel	vertical angle (°)	ranging@10%	Emission	Farthest ranging (m)	Channel	vertical angle (°)	ranging@10%	Emission	Farthest ranging (m)
		Target reflector (m)	offset (us)				Target reflector (m)	offset (us)	
1	-0.07	30	0	60	49	45.05	30	41.888	60
2	0.88	30	0	60	50	46	30	41.888	60
3	1.81	30	0	60	51	46.95	30	41.888	60
4	2.76	30	0	60	52	47.9	30	41.888	60
5	3.69	30	0	60	53	48.85	30	41.888	60
6	4.62	30	0	60	54	49.8	30	41.888	60
7	5.54	30	0	60	55	50.73	30	41.888	60
8	6.48	30	0	60	56	51.69	30	41.888	60
9	7.41	30	5.712	60	57	52.62	30	50.456	60
10	8.34	30	5.712	60	58	53.56	30	50.456	60
11	9.27	30	5.712	60	59	54.5	30	50.456	60
12	10.21	30	5.712	60	60	55.45	30	50.456	60
13	11.15	30	5.712	60	61	56.37	30	50.456	60
14	12.09	30	5.712	60	62	57.3	30	50.456	60
15	13.03	30	5.712	60	63	58.24	30	50.456	60
16	13.98	30	5.712	60	64	59.18	30	50.456	60
17	14.92	30	12.376	60	65	60.12	30	59.024	60
18	15.87	30	12.376	60	66	61.05	30	59.024	60
19	16.82	30	12.376	60	67	61.99	30	59.024	60
20	17.77	30	12.376	60	68	62.93	30	59.024	60
21	18.72	30	12.376	60	69	63.86	20	59.024	60
22	19.67	30	12.376	60	70	64.81	20	59.024	60
23	20.62	30	12.376	60	71	65.76	20	59.024	60
24	21.57	30	12.376	60	72	66.69	20	59.024	60
25	22.51	30	19.040	60	73	67.65	20	70.448	60
26	23.45	30	19.040	60	74	68.6	20	70.448	60
27	24.4	30	19.040	60	75	69.56	20	70.448	60
28	25.33	30	19.040	60	76	70.51	20	70.448	60

29	26.28	30	19.040	60	77	71.46	20	70.448	60
30	27.21	30	19.040	60	78	72.42	20	70.448	60
31	28.15	30	19.040	60	79	73.37	20	70.448	60
32	29.08	30	19.040	60	80	74.33	20	70.448	60
33	30.02	30	25.704	60	81	75.29	20	81.872	60
34	30.95	30	25.704	60	82	76.24	20	81.872	60
35	31.88	30	25.704	60	83	77.19	20	81.872	60
36	32.82	30	25.704	60	84	78.14	20	81.872	60
37	33.74	30	25.704	60	85	79.07	20	81.872	60
38	34.68	30	25.704	60	86	80.02	20	81.872	60
39	35.62	30	25.704	60	87	80.96	20	81.872	60
40	36.55	30	25.704	60	88	81.9	20	81.872	60
41	37.5	30	33.320	60	89	82.84	20	93.296	60
42	38.43	30	33.320	60	90	83.78	20	93.296	60
43	39.37	30	33.320	60	91	84.7	20	93.296	60
44	40.31	30	33.320	60	92	85.64	20	93.296	60
45	41.25	30	33.320	60	93	86.57	20	93.296	60
46	42.21	30	33.320	60	94	87.52	20	93.296	60
47	43.16	30	33.320	60	95	88.46	20	93.296	60
48	44.09	30	33.320	60	96	89.4	20	93.296	60

The ranging capabilities and emission offset of different channels of Airy-v are shown in Table 33.

Table 33 Airy-v ranging capability and emission offset

Channel	vertical angle (°)	ranging@10%	Emission	Farthest	Channel	vertical angle (°)	ranging@10%	Emission	Farthest
		Target reflector (m)	offset (us)	ranging (m)			Target reflector (m)	offset (us)	ranging (m)
1	-0.07	20	0	60	49	45.05	30	62.832	60
2	0.88	20	0	60	50	46	30	62.832	60
3	1.81	20	0	60	51	46.95	30	62.832	60
4	2.76	20	0	60	52	47.9	30	62.832	60
5	3.69	20	0	60	53	48.85	30	62.832	60
6	4.62	20	0	60	54	49.8	30	62.832	60
7	5.54	20	0	60	55	50.73	30	62.832	60
8	6.48	20	0	60	56	51.69	30	62.832	60
9	7.41	20	11.424	60	57	52.62	30	71.400	60
10	8.34	20	11.424	60	58	53.56	30	71.400	60
11	9.27	20	11.424	60	59	54.5	30	71.400	60
12	10.21	20	11.424	60	60	55.45	30	71.400	60
13	11.15	20	11.424	60	61	56.37	30	71.400	60
14	12.09	20	11.424	60	62	57.3	30	71.400	60
15	13.03	20	11.424	60	63	58.24	30	71.400	60


16	13.98	20	11.424	60	64	59.18	30	71.400	60
17	14.92	20	22.848	60	65	60.12	30	79.016	60
18	15.87	20	22.848	60	66	61.05	30	79.016	60
19	16.82	20	22.848	60	67	61.99	30	79.016	60
20	17.77	20	22.848	60	68	62.93	30	79.016	60
21	18.72	20	22.848	60	69	63.86	30	79.016	60
22	19.67	20	22.848	60	70	64.81	30	79.016	60
23	20.62	20	22.848	60	71	65.76	30	79.016	60
24	21.57	20	22.848	60	72	66.69	30	79.016	60
25	22.51	30	34.272	60	73	67.65	30	85.680	60
26	23.45	30	34.272	60	74	68.6	30	85.680	60
27	24.4	30	34.272	60	75	69.56	30	85.680	60
28	25.33	30	34.272	60	76	70.51	30	85.680	60
29	26.28	30	34.272	60	77	71.46	30	85.680	60
30	27.21	30	34.272	60	78	72.42	30	85.680	60
31	28.15	30	34.272	60	79	73.37	30	85.680	60
32	29.08	30	34.272	60	80	74.33	30	85.680	60
33	30.02	30	45.696	60	81	75.29	30	92.344	60
34	30.95	30	45.696	60	82	76.24	30	92.344	60
35	31.88	30	45.696	60	83	77.19	30	92.344	60
36	32.82	30	45.696	60	84	78.14	30	92.344	60
37	33.74	30	45.696	60	85	79.07	30	92.344	60
38	34.68	30	45.696	60	86	80.02	30	92.344	60
39	35.62	30	45.696	60	87	80.96	30	92.344	60
40	36.55	30	45.696	60	88	81.9	30	92.344	60
41	37.5	30	54.264	60	89	82.84	30	99.008	60
42	38.43	30	54.264	60	90	83.78	30	99.008	60
43	39.37	30	54.264	60	91	84.7	30	99.008	60
44	40.31	30	54.264	60	92	85.64	30	99.008	60
45	41.25	30	54.264	60	93	86.57	30	99.008	60
46	42.21	30	54.264	60	94	87.52	30	99.008	60
47	43.16	30	54.264	60	95	88.46	30	99.008	60
48	44.09	30	54.264	60	96	89.4	30	99.008	60

The ranging capabilities and emission offset of different channels of Airy-g are shown in Table 34.

Channel	vertical angle (°)	ranging@10%	Emission offset(us)	Farthest ranging (m)	Channel	vertical angle (°)	ranging@10%	Emission offset(us)	Farthest ranging (m)
		Target reflector (m)					Target reflector (m)		
1	-0.07	30	0	60	25	22.51	30	25.704	60
2	0.88	30	0	60	26	23.45	30	25.704	60
3	1.81	30	0	60	27	24.4	30	25.704	60
4	2.76	30	0	60	28	25.33	30	25.704	60

5	3.69	30	0	60	29	26.28	30	25.704	60
6	4.62	30	0	60	30	27.21	30	25.704	60
7	5.54	30	0	60	31	28.15	30	25.704	60
8	6.48	30	0	60	32	29.08	30	25.704	60
9	7.41	30	5.712	60	33	30.02	30	33.320	60
10	8.34	30	5.712	60	34	30.95	30	33.320	60
11	9.27	30	5.712	60	35	31.88	30	33.320	60
12	10.21	30	5.712	60	36	32.82	30	33.320	60
13	11.15	30	5.712	60	37	33.74	30	33.320	60
14	12.09	30	5.712	60	38	34.68	30	33.320	60
15	13.03	30	5.712	60	39	35.62	30	33.320	60
16	13.98	30	5.712	60	40	36.55	30	33.320	60
17	14.92	30	12.376	60	41	37.5	30	41.888	60
18	15.87	30	12.376	60	42	38.43	30	41.888	60
19	16.82	30	12.376	60	43	39.37	30	41.888	60
20	17.77	30	12.376	60	44	40.31	30	41.888	60
21	18.72	30	12.376	60	45	41.25	30	41.888	60
22	19.67	30	12.376	60	46	42.21	30	41.888	60
23	20.62	30	12.376	60	47	43.16	30	41.888	60
24	21.57	30	12.376	60	48	44.09	30	41.888	60

## Appendix E Structural Drawings

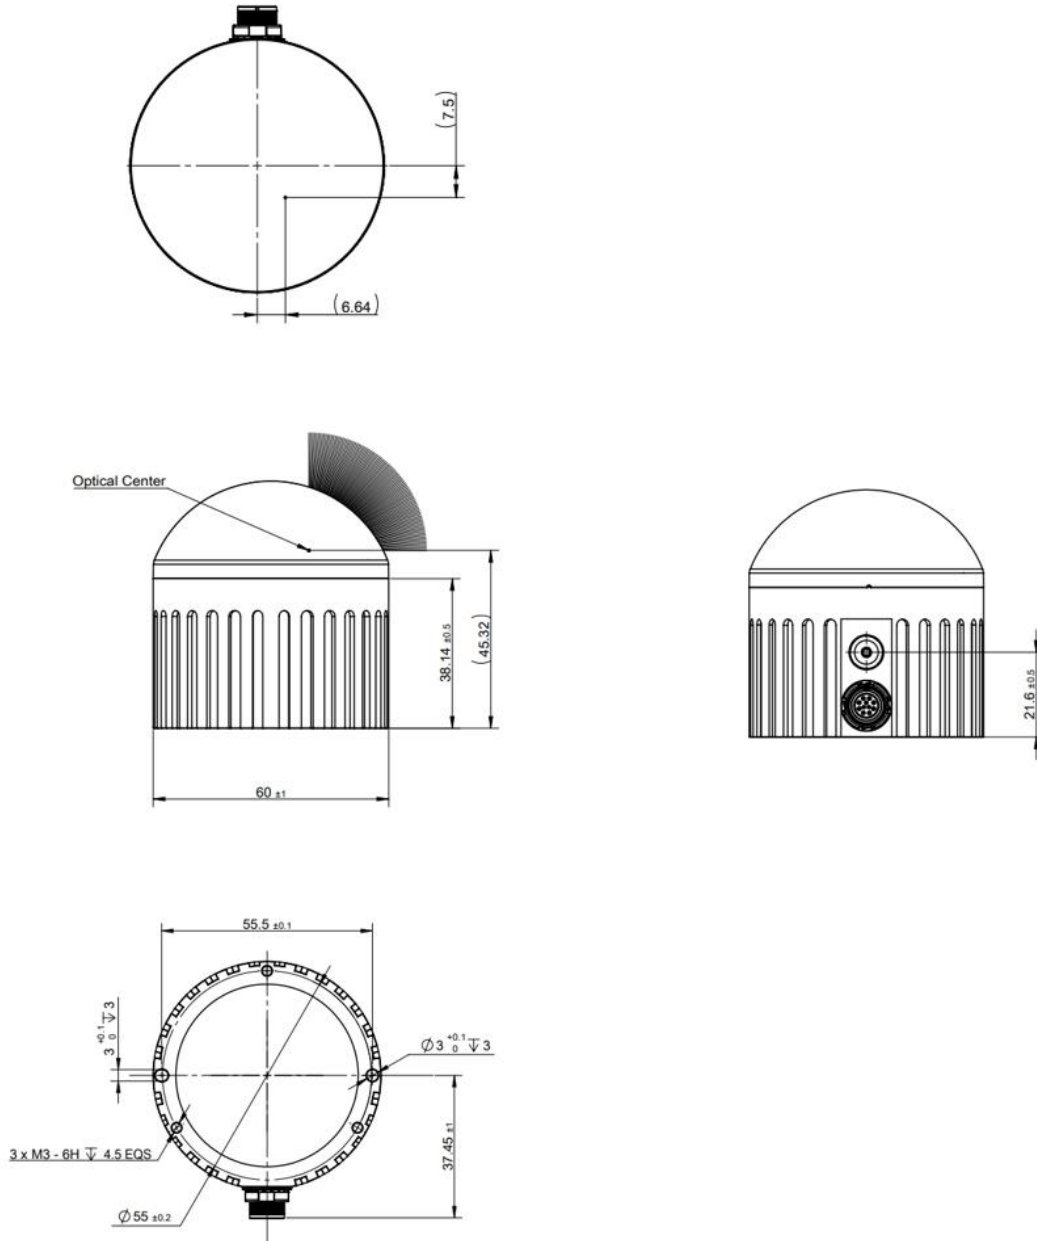



Building 9, Block 2, Zhongguan Honghualing Industry Southern District, 1213  
Liuxian Avenue, Taoyuan Street, Nanshan District, Shenzhen, China  
[www.robosense.ai](http://www.robosense.ai)